

## POE303-EX-4P FAQ

[Question]

How could I connect power to the POE303-EX-4P, I didn't see any power input interface?

[Answer]

POE303-EX-4P doesn't offer a terminal block for you connect external power source. The POE303-EX-4P is not only PSE equipment, but also it is a PoE device, so you have to connect it to 60W PSE device via RJ45 cable, such as POE303-MS or NS3503-16P-4C to power it. It offers power to 4 PD devices maximum.