Sentrol 6255 SureShot[™] PIR



Installation Instructions

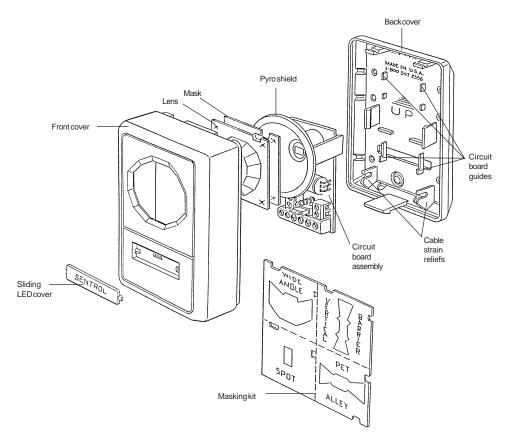


Figure 1. Exploded view

Avoid False Alarm Sources

For false-alarm-free operation, a PIR should not "see" sources of heat or cold. See Figure 2.

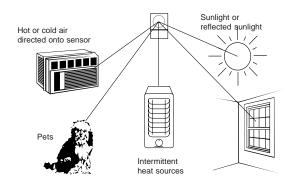


Figure 2. False alarm sources

Installing the SureShot

- 1. Remove the front cover by gently prying the unit apart at the bottom. The front cover hinges at the top.
- 2. Remove the circuit board assembly by holding the pyro shield and pulling it out of the back cover. See Figure 1.



CAUTION

You must be free of static electricity before handling sensor circuit boards. Touch a grounded, bare metal surface before touching circuit boards or wear a grounding strap.

- 3. Mount the back cover to a ceiling, wall, or corner. For wall mounting, make sure the "up" arrow is pointing up. Use the appropriate mounting knockouts. See Figure 3.
- 4. Snap the circuit board assembly onto the back cover by aligning the lower edge of the board with the circuit board guides and pressing it into place. See Figure 1.

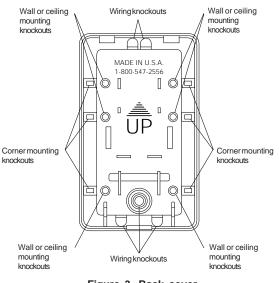


Figure 3. Back cover

- 5. Connect the wires (see Wiring and Figure 7).
- 6. Choose which masking plate you need, if any. Insert it behind the lens on the front cover by pressing it over the four mounting pins. Once the front cover is installed, the masking plate will be held tight against the lens.

Note

The masking plates have two notches to prevent incorrect installation. One notch matches a rib in the front cover. The other notch matches a dimple in the lens. See Figure 4.

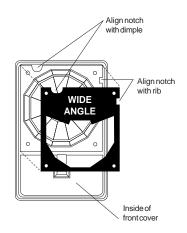


Figure 4. Masking plates

Note

To correctly mount the Pet Alley Mask, the lens must be removed from the front cover and rotated 180 degrees. See Figure 5.

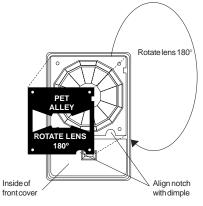


Figure 5. Pet alley mask

7. Replace the front cover.

Note

When mounting on the ceiling, align the unit to maximize the oblong detection pattern for the room. See Figure 6.

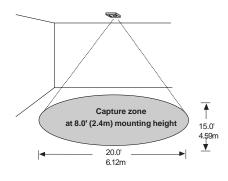


Figure 6. Detection pattern

8. After walk testing, the LED cover can be used to cover the LED. See Figure 1.

Wiring

Strip back the outer jacket on the wiring cable. This will allow wires to flex in the case. Use the cable strain relief built into the back cover to prevent stressing wires at their connection. See Figure 1.


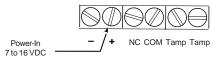


Figure 7. Wiring

Note

The unit should be connected to a UL listed power supply capable of providing four hours of standby power.


Zone Patterns

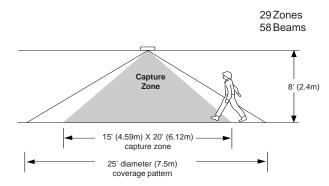

Note


An intruder must enter the capture zone in order to be detected. False alarm sources, such as heaters, should be kept out of the coverage pattern.



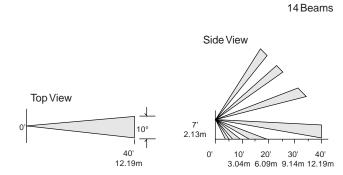

7 Zones



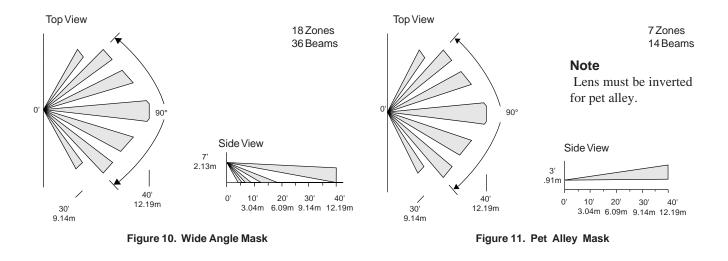


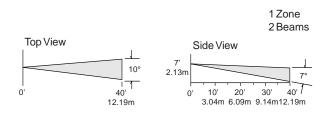


Figure 12. Single Spot Mask

Specifications

Pulse count Bi-directional, 1 zone (2 pulses) Capture zone (at 70° F)
Wide Angle (90°) 40' (12.19m) x 30' (9.14m)
Single Spot 40' (12.19m) range
Vertical Barrier
Pet Alley (90°) 40' (12.19m) range
360°Ceiling 15' x 20' (4.57m x 6.10m) at 8' (2.44m)
mounting height
16' x 30' (4.88m x 9.14m) at 12' (3.65m)
mounting height
Ceiling mounting height up to $12'(3.65m)$
Mounting Wall, corner, or ceiling
LED indicator Walktest
Size
3.75" (9.52cm) H
1.20" (3.05cm) D

Color Wi	hite
Voltage	DC
Current	
Maximum relay rating 16VDC, 50	mΑ
Alarm output Fail safe contacts w/ 10 ohms in ser	ies,
Form A, Closed loop (N	VC)
Alarm duration	nds
Cover tamper contacts Closed lo	op,
rating: 50mA, 12V	
Operating temperature 0°F to 120°F (-17°C to 50	°C)
Humidity 10% to 90% noncondens	ing
RFI immunity greater than 10V/meter from 0 to 1000M	ΙΗ̈́z
Static/lightning immunity 2.5KV, 2 joules max ene	rgy
impulse, 1 msec rise / 50 msec de	cay

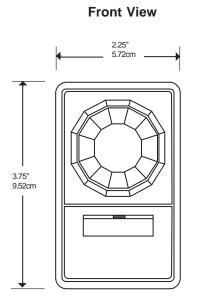

Side View



Ordering Information

Part Number	Loop Туре	Electrical Configuration	Listing
6255	Closed	N.C.	UL



GE Interlogix

12345 SW Leveton Drive Tualatin, OR 97062 www.interlogixsecurity.com www.sentrol.com

© 2002 GE Interlogix, Inc.

Phone: 503-692-4052 USA & Canada: 800-547-2556 Technical Service: 800-648-7424 FaxBack: 800-483-2495

10589 Rev. C 08/02