

TruVision NVR 20 / NVR 21 / NVR 50 Hard Drive Installation Sheet


Installing hard drives in the TVN 20 / TVN 21 / TVN 50

Caution: Do not insert or remove drives with the TruVision NVR 20 (TVN 20) / TruVision NVR 21 (TVN 21) / TruVision NVR 50 (TVN 50) powered on.

Note: This unit contains electrostatic-sensitive components. Before handling the hard drives, make sure you are properly grounded to avoid ESD damage.


1. Unpack the NVR box.
 2. Unpack the NVR HDD box.
- Note:** Hard drives in the shipping box are pre-mounted with their rail kits/caddy.
3. Use the key provided in the accessories box to unlock the front panel.
 4. Press the latches on both sides of the front panel to open it.

Figure 1: Opening the NVR

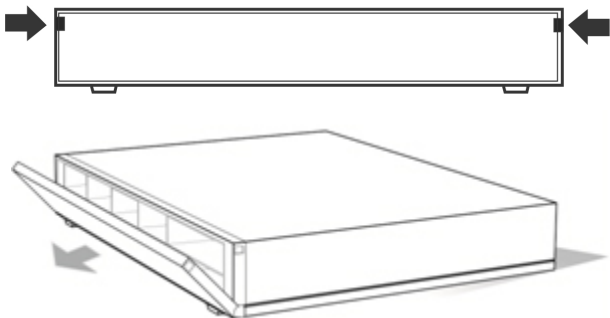


5. Install the hard drives as shown in figure 2. The first drive in position number 1, the second drive in position number 2, etc. Continue to install all the hard drives in numerical order.

Figure 2: Hard drive locations (8 HDD model shown)

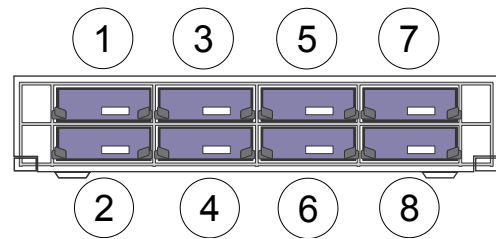

6. Insert a hard drive into one of the hard drive bays until it has fully seated into position. Repeat with the rest of the hard drives.

Figure 3: Insert the hard drive

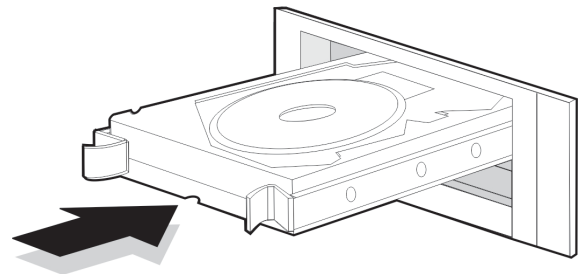

7. Close and re-lock the front panel.

Note: The hard drives must be installed BEFORE powering on the unit. The drives are defaulted to a single HDD group that is automatically ready to record once IP cameras are added and configured with recording schedules.

8. Apply the supplied label on the TVN xxx chassis next to the original label without covering it. **NOTE: Failure to install the label will affect the warranty of the recorder.**

Contact information

www.utcfireandsecurity.com, www.interlogix.com or www.utcssecurityproducts.eu.

For customer support, see www.interlogix.com/customer-support.

© 2013 UTC Fire & Security Americas Corporation, Inc.
Interlogix is part of UTC Climate Controls & Security, a unit of
United Technologies Corporation. All rights reserved.