


Instructions to remove the TruVision 360° camera cover


To remove the TruVision 360° camera cover

1. Open the small flap on the camera cover. Using the hex wrench provided, loosen the small screw.

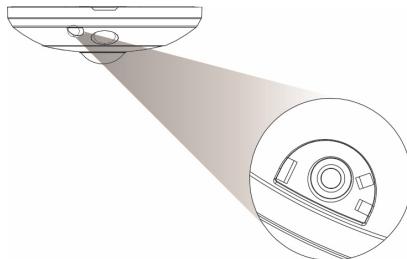


2. Two clips on the cover ring lock it on to the camera base.

Using a flathead screwdriver, release the two clips on the base of the camera to detach the cover.

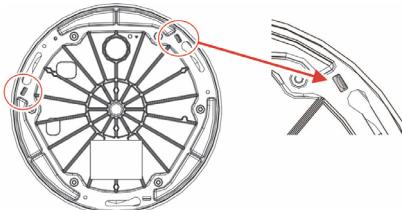


3. Grasp the opening on the side of the cover (1), and pull the cover and base apart to open the camera.


A.

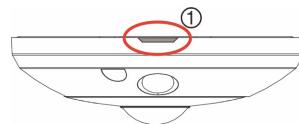

B.

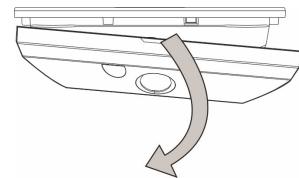

C.

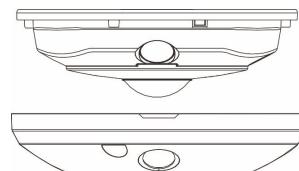

Note: When the TruVision 360° camera is mounted to the wall or ceiling, you will not have access to the two clips. In such situations, use a flathead screwdriver to gently pry the cover (see step 3 A.1) apart from the camera base.

Contact information

For contact information, see
www.interlogix.com or
www.utfsssecurityproducts.eu.