

8906 / 8908 LED KEYPAD

Common Features:

The 8906 / 8908 LED keypads have a common feature allowing you to change the tone of the keypad sounder. Holding down the [#] key while pressing the [6] key will raise the pitch of the keypad sounder. Holding down the [#] key while pressing the [9] key will lower the pitch of the keypad sounder.

Distinct Features:

8906 Keypad: The Fire LED is always enabled. (8600E and 8980E only)

8908 Keypad: This keypad has four (4) dip switches on the back of the keypad. These features are described in the following chart.

8908 Keypad / Dip Switch Settings

Switch #	OFF	ON
1	Enables Fire LED (Will allow the Fire LED to illuminate if an alarm is detected on a Fire zone.) ** (8600E and 8980E only)	Disables Fire LED (Will not allow the Fire LED to illuminate at any time, even if an alarm is detected on a Fire zone.)
2	Not Used (Must be "Off")	Not Used
3	Not Used (Must be "Off")	Not Used
4	1 Minute LED Extinguish Disabled	1 Minute LED Extinguish Enabled (Will cause all LEDs, except the Power LED, to extinguish after 60 seconds if no keypresses are made. Any alarm or keypress will cause the LEDs to illuminate.)