

FAQ of POC2502-8CXP-2T-2S

[POC2502-8CXP-2T-2S]

Could I plug in analog camera to the POC2502-8CXP BNC port directly and could it be powered directly?

[Answer]

No, please don't do it and it could not be powered.

If you connect the analog camera to the switch directly, it may be damaged.

The POC2502-8CXP does not supports analog camera and the BNC port of POC2502-8CXP supports POC252-1CX-1P only.

If you still need to connect an analog camera, please connect a PoE splitter between POC252-1CX-1P and your camera, such as POE302-SP.

[POC2502-8CXP-2T-2S]

Why PoE port of POC2502-8CXP has no power output? It is the first time to activate this switch.

[Answer]

For security reason, all PoE ports has been set up to disable in factory default setting.

Please make sure you have connected POC252-1CX to the PoE port of POC2502-8CXP then login to the switch via WBE UI and click on "PoE Configuration" web page and set "System POE Admin Mode" to enable.

PoE Configuration	
System PoE Admin Mode	Enable ▾
PoE Management Mode	Consumption ▾
Temperature Threshold	80 Degrees C
PoE Temperature	40°C / 104°F