

AL-1698 Dual Battery Harness Installation Instructions

Description

Use the AL-1698 battery harness to connect two 12 Ah batteries to the 4-door/4-elevator controller DGP. Batteries are mounted in the DGP enclosure (if space permits) or in a separate battery enclosure.

Installation

To install the battery harness, do the following:

1. Disconnect AC power to the DGP.

Caution: Observe polarity and be careful not to short circuit the wires when installing the battery harness.

2. Connect the red (+) wires to the + battery terminal on the DGP (Figure 1 below) and to the battery (Figure 2 below). Tighten screws securely.
3. Connect the black (-) wires to the - battery terminal on the DGP (Figure 1 below) and to the battery (Figure 2 below). Tighten the screws securely.
4. Reconnect AC power to the DGP.

Figure 1: Battery terminals on the 4-door/4-elevator controller DGP


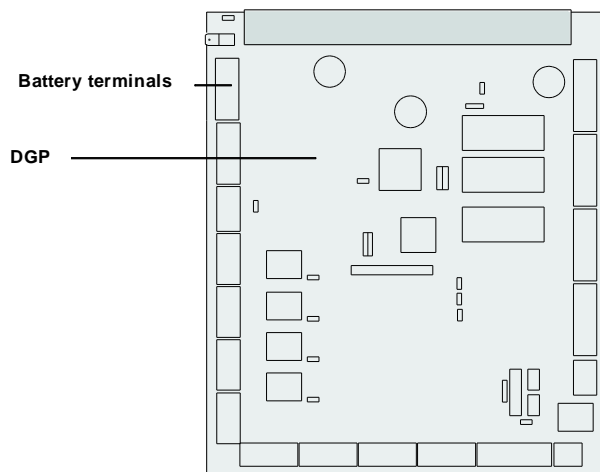


Figure 2: Battery terminal connections

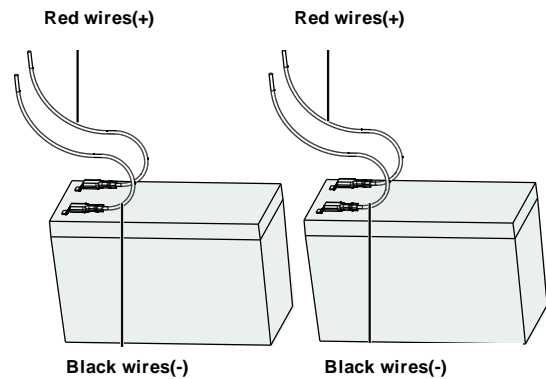

Contact information

www.utcfireandsecurity.com or www.interlogix.com

For customer support, see www.interlogix.com/customer-support

© 2012 UTC Fire & Security Americas Corporation, Inc.
Interlogix is part of UTC Climate Controls & Security, a unit of United Technologies Corporation. All rights reserved.