


TVP-CWM Compact PTZ Indoor Wall Mount Installation Instructions

Dimensions

Dimensions: 125.8 × 80 × 223.9 mm (4.95 × 3.15 × 8.81 in.)

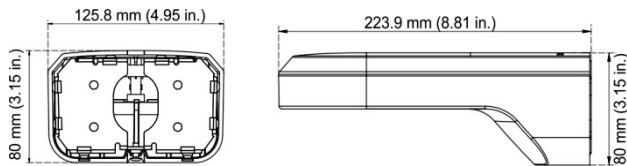


Weight: 450 g (0.99 lbs.)

Accessories:


Drill template: 1 pcs

Used to drill mounting holes.

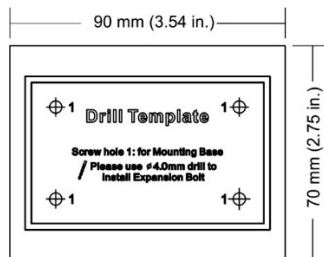


Drywall anchors: 4 pcs

Used to install the indoor wall mount to the mounting surface.

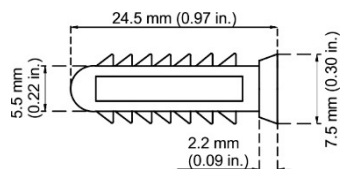


Screw A: 4 pcs

Used to install the indoor wall mount to the mounting surface.

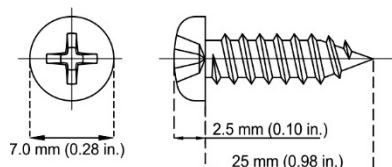

Screw B: 3 pcs

Used to install the mounting plate to the indoor wall mount.

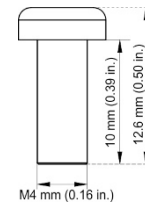

Supported cameras


The compact PTZ indoor plastic wall mount can be used with following cameras:

IP Compact PTZ Camera:	TVP-5101
------------------------	----------


Installation

To install the TVP-5101 PTZ camera on a mounting surface using the TVP-CWM:

1. Remove the wall mount mounting plate from the mount by loosening the screw that locks the mount in place, located towards the back of the wall mount. Pull the mounting plate away from the mount. It is held in place by two metal clips and dimples.
2. Rotate the adapter plate counterclockwise to separate it from the PTZ camera.

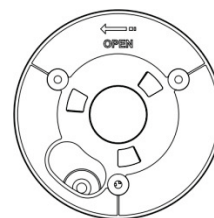


View of adapter plate when mounted to the PTZ

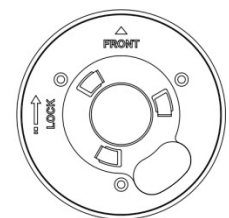


View of the adapter plate that goes towards the PTZ

3. Keep in mind that the PTZ pan range is 350 degrees. Align the cable access hole in the adapter plate with the access hole in the wall mount. Install the adapter plate to the wall mount using screw B.

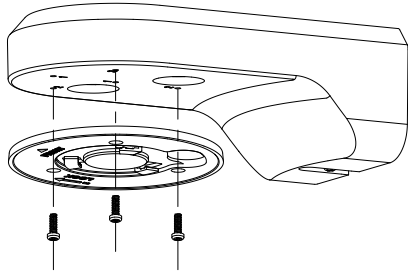


4. Route the PTZ cable harness through the cable access hole.
5. Align the PTZ camera with the three clips on the adapter plate. Rotate the PTZ camera clockwise to secure the camera to the adapter plate. The three clips on the adapter plate lock the camera in place.

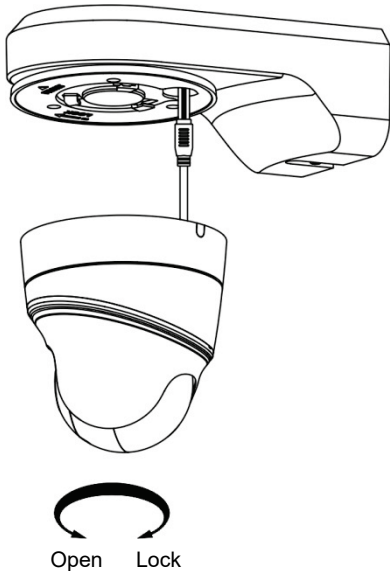


6. Separate the mounting base (see image below) from the wall mount.

Using the wall mount mounting base mark the mounting holes. Make sure that the up arrow on the mounting plate is pointing up. Provide access for the interconnect cables. Secure the wall mount mounting base to the mounting surface with the four A screws (use drywall anchors if the mounting surface is a wall).

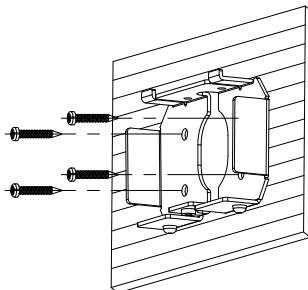

7. Connect the corresponding cables.

Install the camera assembly to the mounting plate by lining up the two slots in the top of the wall mount with the two metal clips at the top of the mounting plate. Push down on the wall mount/PTZ until it snaps into place. Tighten the screw at the base of the wall mount to lock it in place.

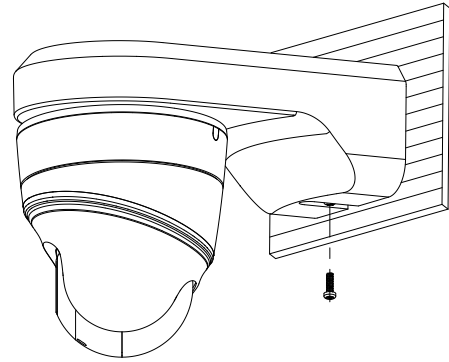

Legal and regulatory information

Trademarks and patents	The trade names used in this document may be trademarks or registered trademarks of the manufacturers or vendors of the respective products.
Manufacturer	Interlogix. 2955 Red Hill Avenue, Costa Mesa, CA 92626 5923, USA Authorized EU manufacturing representative: UTC Fire & Security B.V. Kelvinstraat 7, 6003 DH Weert, The Netherlands

Certification



Product warnings and disclaimers

THESE PRODUCTS ARE INTENDED FOR SALE TO AND INSTALLATION BY QUALIFIED PROFESSIONALS. UTC FIRE & SECURITY CANNOT PROVIDE ANY ASSURANCE THAT ANY PERSON OR ENTITY BUYING ITS PRODUCTS, INCLUDING ANY "AUTHORIZED DEALER" OR "AUTHORIZED RESELLER", IS PROPERLY TRAINED OR EXPERIENCED TO CORRECTLY INSTALL FIRE AND SECURITY RELATED PRODUCTS.

For more information on warranty disclaimers and product safety information, please check www.firesecurityproducts.com/policy/product-warning/ or scan the following code:



Contact information and manuals / tools / firmware

For contact information and to download the latest manuals, tools, and firmware, go to the web site of your region.

Americas: www.interlogix.com

EMEA: www.firesecurityproducts.com

Manuals are available in several languages

Australia/New Zealand: www.utcfs.com.au