


# TruVision TVD-PPB Pendant Mount Installation Instructions

## Specifications

**Dimensions:** 150 × 537 mm (5.90 × 21.14 in.)

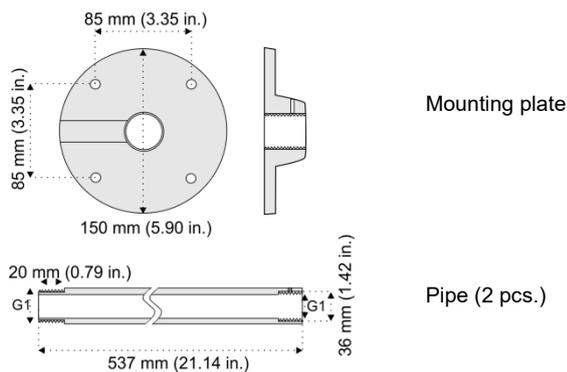

## Pipe threading information


Pipe thread size	Threads/ in	Pitch (mm)	Thread major diameter	
			(mm)	(in.)
G 1	11	2.309	33.249	1.309
Corresponding pipe				Tapping drill size (mm)
DN	OD (mm)	OD (in.)	Thickness (mm)	BSP. F (G)
25	33.7	1.33	3.2	30.75

**Weight:** 1169 g (2.56 lb.)

## Accessories:


Expansion anchors: 4 pcs

Used to install the pendant mount to the mounting surface.

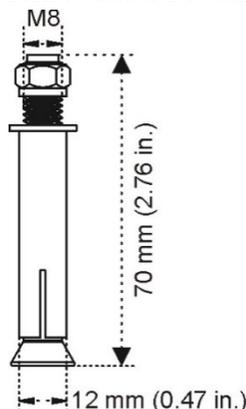

Locking screw A: 5 pcs.

Used to secure the pole to the other components.

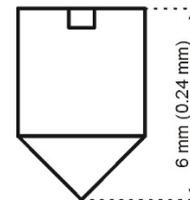

## Supported cup bases and back boxes

The pendant mount can be used with the following TruVision accessories:

- TVW-AWB-1
- TVW-DVM
- TVD-CB2
- TVD-CB3
- TVD-CB5A
- TVD-CB6
- TVD-CB7
- TVF-CBM


## Installation

For detailed instructions, refer to the installation guide for the camera that you are installing. The following requirements are mandatory precautions.


- The mounting surface must be thick enough to install the expansion anchors.
- Ensure that the mounting surface is strong enough to withstand more than eight times the weight of the camera and pendant mount.

## To attach a camera to the wall mount (TVD-PPB):

1. Choose the appropriate location on the mounting surface. Use the pendant base to mark the holes for the expansion anchors and to also provide access for the cables before installing with the mount.
2. Drill holes in the mounting surface and install the four expansion anchors.
3. Screw the mounting plate onto the tube and fasten with the locking screw, as shown.

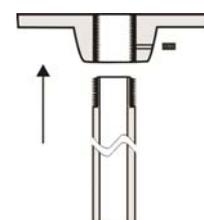

4. Route the cables through the pendant mount base and tube.
5. Secure the pendant mount base to the mounting surface using the hardware provided with the expansion anchors.

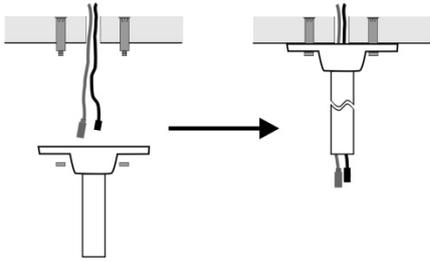

6. To complete camera installation, refer to the installation instructions for the specific camera and accessory.

Contact information and manuals / tools / firmware

For contact information and to download the latest manuals, tools, and firmware, go to the web site of your region.

Americas: [www.interlogix.com](http://www.interlogix.com)

EMEA: [www.firesecurityproducts.com](http://www.firesecurityproducts.com)

Manuals are available in several languages

Australia/New Zealand: [www.utcfs.com.au](http://www.utcfs.com.au)

## Legal and regulatory information

**Copyright** © 2019 United Technologies Corporation. All rights reserved.  
Interlogix is part of UTC Climate, Controls & Security, a unit of United Technologies Corporation.

**Disclaimer** Information in this document is subject to change without notice. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of UTC Fire & Security Americas Corporation, Inc.

**Trademarks and patents** The trade names used in this document may be trademarks or registered trademarks of the manufacturers or vendors of the respective products.

**Manufacturer** Interlogix.  
2955 Red Hill Avenue, Costa Mesa, CA 92626 5923, USA  
Authorized EU manufacturing representative:  
UTC Fire & Security B.V.  
Kelvinstraat 7, 6003 DH Weert, The Netherlands

**Certification**  

**Product warnings and disclaimers** THESE PRODUCTS ARE INTENDED FOR SALE TO AND INSTALLATION BY QUALIFIED PROFESSIONALS. UTC FIRE & SECURITY CANNOT PROVIDE ANY ASSURANCE THAT ANY PERSON OR ENTITY BUYING ITS PRODUCTS, INCLUDING ANY "AUTHORIZED DEALER" OR "AUTHORIZED RESELLER", IS PROPERLY TRAINED OR EXPERIENCED TO CORRECTLY INSTALL FIRE AND SECURITY RELATED PRODUCTS.

For more information on warranty disclaimers and product safety information, please check [www.firesecurityproducts.com/policy/product-warning/](http://www.firesecurityproducts.com/policy/product-warning/) or scan the following code:

