


TVD-VFM TruVision VF Dome Flush Mount Bracket Installation Instructions

Description

Figure 1: Physical description

Dimensions: 200 × 26.8 mm (7.87 × 1.04 in.)

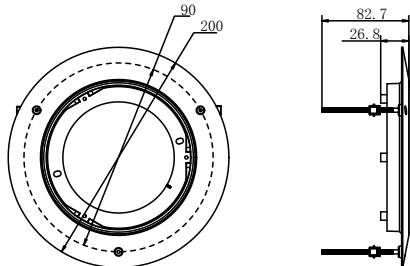

Weight: 300 g (0.66 lb.)

Supported cameras:
TVD-2202, TVD-4202
TVD-2402, TVD-4402
TVD-2404, TVD-4404
TVD-2405, TVD-4405


Toggle bolts 3 pcs



Screws Screws PM4×16 mm (3 pcs)
(used to attach the camera to the flush mount bracket)




Drill template

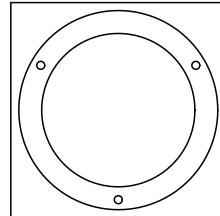


Installation

To attach the VF dome camera to the flush mount bracket:


1. Mark the mounting holes on the mounting surface using the drill template.
2. Drill three mounting holes and the clearance hole for the flush mount bracket in the mounting surface.
3. Attach the three toggle bolts to the bracket.
4. Push the toggle bolts through the mounting holes. Tighten the toggle bolts using a screwdriver until the bracket is flush against the mounting surface.

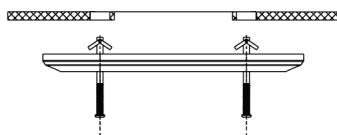


5. Remove the bubble assembly using the Torx wrench.

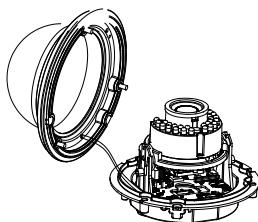

6. Route and connect the interconnect cables.
7. Attach the dome camera to the flush mount bracket using the three supplied screws.

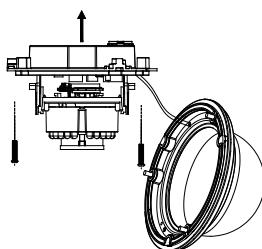

8. Reinstall the bubble assembly to the dome.

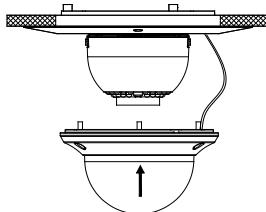

Legal information

Manufacturer	Interlogix. 2955 Red Hill Avenue, Costa Mesa, CA 92626 5923, USA Authorized EU manufacturing representative: UTC Fire & Security B.V. Kelvinstraat 7, 6003 DH Weert, The Netherlands
Copyright	© 2016 United Technologies Corporation. Interlogix is part of UTC Climate, Controls & Security Systems, a unit of United Technologies Corporation. All rights reserved.
Trademarks and patents	The trade names used in this document may be trademarks or registered trademarks of the manufacturers or vendors of the respective products.

Contact information

For contact information, see
www.interlogix.com or
www.utcfsssecurityproducts.eu.