

Director Integrated Software

Prime and Enterprise



OVERVIEW

Director™ software offers a higher level of management and control, seamlessly integrating intrusion, access control and video into an intuitive user interface. Going beyond a typical alarm monitoring interface, the software provides central database management, monitoring of transactions and alarms, system configuration, panel programming, graphical maps and system reports.

Director software offers complete intrusion and access control management and is highly scalable to meet your applications with three levels of software available; Director Prime,™ Enterprise™ and Enterprise Elite.™ Additionally, the system can be configured to manage a single site or a networked multi-site configuration up to 250 panels.

The alarm transaction window provides fluid information flow for processing and logging alarm events within the system. The operator can process events using custom instructions and graphical maps, minimizing any errors while processing the event.

Standard features such as user definable fields; remote download of firmware upgrades for panels, Boolean programming and online help populates Director software with the necessary tools to manage your system.

STANDARD FEATURES

- Integrated Intrusion Detection, Access Control and Video Surveillance
- Network Command and control of up to 250 panels per system
- Director Prime: manages up to 16 doors, 256 inputs and 1000 users
- Director Enterprise: manages up to 1,920 doors, 15,000 inputs and 10,000 users
- Director Enterprise Elite: manages up to 8000 doors, 64,000 inputs and 64,000 users


- Standard with each Director software package is one DVR interface managing up to 16 cameras
- Director Enterprise and Director Enterprise Elite can support up to 500 DVRs per system with additional licenses*
- Manage the system through direct connect, dial up and TCP/IP connectivity
- Simple Programming Boolean logic output programming with simple drop down lists to easily support and link functions for even the most complex security needs
- Input command points support advanced system integration with up to 20 advanced custom point types per panel
- Multiple views available including Visual Director that allows interactive graphic maps
- Visual Director features:
 - System configuration and user management via tree configuration pane
 - Upload maps or other image files for use as visual aids (multiple image display capability)
 - Dynamic maps provide Interactive control and status of Areas, Points, Doors, etc.
 - View real time video
 - Access Control photo verification
 - Link Input points and/or doors to video events
- One step disaster recovery with "Send-To" or "Get-From" panel
- Integrated elevator cab door control
- Video Integration compatible with:
 - Verex embedded DVRs
 - March Networks R4 & R5 DVRs
 - Interlogix TruVision™ DVRs
 - Hikvision cameras
- Camera call up upon alarm
- Pull up video events


^{*}TruVision™ DVR licensing is not required for Director version 4.90 and higher.

Specifications

Alarm Reporting	CID/SIA			
Card Formats Magstripe ABA standard, Wiegand pre-defined standard 26 bits Guardall 36 bits, and custom up to 40 bits format				
System Architecture	Stand-alone, Direct Cable, Dial-up and IP networking			
Reader Technology	Wiegand, Magstripe, Proximity, Biometrics, Wireless			
Languages	English, French, Spanish, Dutch, Simplified & Traditional Chinese, Russian			
Image File Types Accepted (for Maps)	WMF, EMF, JPG, BMP			
Main Supply	16.5VAC, 37.5VA			
Standards	ULC, UL, UL ICAN, FCC, IC, CE			

Director Software - Communication Architecture

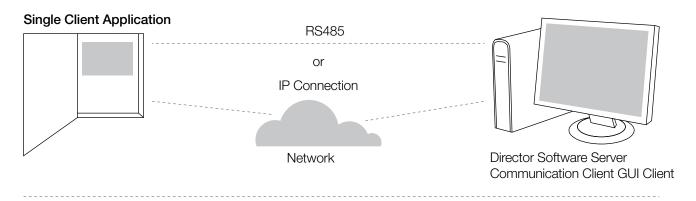

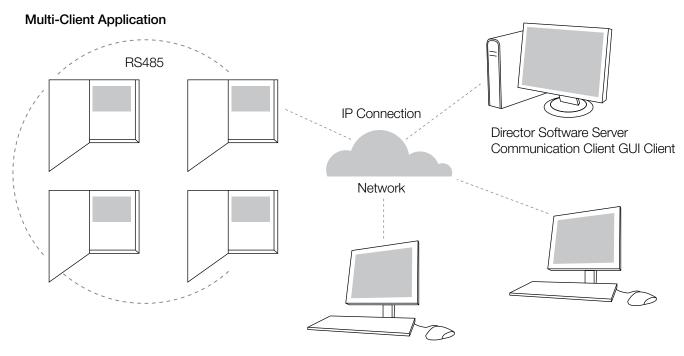

Software and Hardware Capacity

Software Package	Prime	Enterprise	Enterprise Elite	Options (Enterprise & Enterprise Elite)
Monitor XL Panels	1	60	60	60–100 or 100–250
Accounts	1	10	100	1000 or 3000*
Total Doors	16	1920	1920	1920, up to 8000
DVR's	1	500	500	500
Total Suites	N/A	3600	3600	3600, up to 15,000
Comm. Clients	1	3	3, up to 25	3, up to 25
Graph User Interface	2	10	10	10, up to 50

^{*}Dealer key required.

Feature Set Levels and Capacities (Software)

	Prime Enter					Enterprise	rise			Enterprise Elite							
Feature)1	0	2		3	04	05	06	07	08	09	10	11	12	13	14
		'		_			04	00	00	01	00	03	10		12	10	
User Name LCD Display	No D	isplay	Na	me	Na	me	Name	Name	Name	User ID	Name						
Users			100		300	1,000	1,000	1,000	2,000	4,000	10,000	10,000	20,000	20,000	20,000	64,000	64,000
Users Log On	Pin Only	Pin Only	2 Digit ID+Pin	2 Digit ID+Pin	3 Digit ID+Pin	3 Digit ID+Pin	3 Digit ID+Pin	3 Digit ID+Pin	4 Digit ID+Pin	4 Digit ID+Pin	4 Digit ID+Pin	4 Digit ID+Pin	5 Digit ID+Pin				
Doors/panel							16	32	32	32	32	32	32	32	32	32	32
Schedule	5	50	5	0	5	60	100	100	100	100	250	250	250	250	250	250	250
Authority	3	30	3	0	3	10	100	100	100	100	500	500	500	1,000	1,000	1,000	1,000
Profile	6	60	6	0	ε	60		200	200	200	750	750	1,000	1,000	1,000	1,000	1,000
User Edit	1	0	1	0	1	0	50	50	50	50	750	750	1,000	1,000	1,000	1,000	1,000
Floor Authority		_	-	-		_	-	100	100	100	100	100	100	100	100	100	100
Points (Inputs)	2	56	25	56	256		256	256	256	256	256	256	256	256	256	256	256
Outputs	1:	28	12	28	128		128	128	128	128	128	128	128	128	128	128	128
Area	1	6	1	6	16		16	16	16	16	16	16	16	16	16	16	16
Log Buffer	1,0)24	1,0)24	1,024		2,048	2,048	2,048	2,048	8,192	8,192	8,192	16,364	16,364	65,536	16,364
Modules	2	24	2	4	24		24	24	24	24	24	24	24	24	24	24	24
Custom Point	2	20	2	0	2	.0	20	20	20	20	20	20	20	20	20	20	20
Pseudo Point	1	6	1	6	1	6	16	16	16	16	16	16	16	16	16	16	16
Holiday	5	60	5	0	5	0	50	50	50	50	50	50	50	50	50	50	50
Suite Security		-	-		-		-	60	60	60	60	60	60	60	60	60	60
Floors		-	-	-		-	-	124	124	124	124	124	124	124	124	124	124
	01	01	02	02	03	03	04	05	06	07	08	09	10	11	12	13	14
Monitor xL							ı	Feature Se	et Levels ar	nd Capacition	es (Hardwar	re)					
w/ Std RAM	Std		Std		Std												
w/ FEB 128kb RAM		128kb		128kb				128kb									
w/ FEB 512kb RAM											512	2kb					
w/ FEB 1024kb RAM														1024kb			
w/ FEB 2048kb RAM																204	8kb

North America T 855-286-8889

Asia T 852-2907-8108 Australia

Europe

Latin America T 61-3-9239-1200 T 32-2-725-11-20 T 561-998-6114

Director Integrated Software

Prime and Enterprise

Ordering Information

Base Software

120-8601	Director Prime Management Software		
120-8605	Director Enterprise Management Software		
120-8608	Director Enterprise Elite Management Software		

Software Support Agreements

120-8627	Software Support Agreement for Director Prime Software
120-8628	Software Support Agreement for Director Enterprise Software
120-8629	Software Support Agreement for Director Enterprise Elite Software
120-8657	Software Support Agreement for Director Enterprise Elite Advanced Software

Director Software Upgrades

120-8604	Director Prime to Enterprise Upgrade Software (no key)
120-8606	Director Enterprise to Enterprise Elite Upgrade Software (no key)
120-8609	Director Enterprise Elite to Enterprise Elite Advanced (no key)
120-8619	Episuite Photo Badging Software (no key)
120-8915	Expand panels from 60 to 100 and Communication Ports from 3 to 10
120-8917	Expand panels from 100 to 250 and Communication Ports from 10 to 25
120-8918	Expand panels from 60 to 250 and Communication Ports from 3 to 25
120-8931	Add 5 GUI Clients (to a maximum of 50)

DVR Interface Licenses*

120-8660	Add 1 Interlogix DVR (to a maximum of 500)
120-8661	Add 5 Interlogix DVRs (to a maximum of 500)
120-8662	Add 50 Interlogix DVRs (to a maximum of 500)
120-8633	Add 1 Other DVR - March R4 or R5 (to a maximum of 500)
120-8634	Add 5 Other DVRs - March R4 or R5 (to a maximum of 500)
120-8635	Add 50 Other DVRs – March R4 or R5 (to a maximum of 500)

^{*}TruVision™ DVR licensing is not required for Director version 4.90 and higher.

