

60-758 SnapCard Installation Addendum

Introduction

This is the 60-758 SnapCard Installation Addendum for the 4-output Expansion SnapCard Installation Instructions (466-1366C). This document includes information on this product that did not make it into your manual or installation instructions. Where information differs between these documents, this document supersedes the manual and installation instructions.

What's new


When you use the 60-758 SnapCard with Concord 4 or Concord Express v4 panels, you must isolate the SnapCard mounting screws from the circuit board using insulating washers on the screws and an insulating label underneath the SnapCard PCB. If you do not isolate the mounting screws, the panel will detect a ground fault condition.

Installation

To install the SnapCard, do the following:

1. Attach the 0.5 x 0.5 in. label (included) over each mounting hole that the SnapCard PCB mounts to ([Figure 1](#)).

Figure 1. SnapCard installation

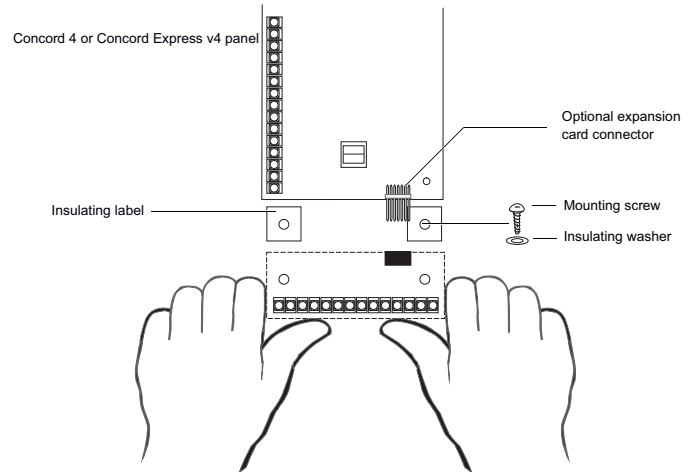

2. Use a pointed object, such as a pen, to pierce a hole in the label. This makes it easier to align the SnapCard mounting holes with the mounting holes in the chassis.
3. Install the SnapCard in the Concord 4 or Concord Express v4 panel as shown in the installation instructions that accompany your SnapCard.
4. Place the insulating washers (included) over each mounting screw, then screw the SnapCard onto the chassis.

Contact information

For contact information, see www.utcfireandsecurity.com or www.interlogix.com.

For technical support, toll-free: 888.437.3287 in the US including Alaska, Hawaii, Puerto Rico, and Canada. Outside the toll-free area, contact your dealer.

Copyright © 2011 Interlogix, a UTC Fire & Security Company. All rights reserved.