

# KALATEL

an interlogix company



## Calibur DSR-2000e

Single Channel Color Digital Video Recorder

## User Manual

**WARNING!**

To prevent fire and electric shock, do not expose this product to rain or moisture.



The lightning flash with the arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that maybe of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



**CAUTION!**

To prevent electric shock, do not remove cover. No user serviceable components are inside. Refer servicing to qualified service personnel.



**CAUTION! Lithium Battery**

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.

**ATTENTION**

This product contains a recyclable lithium battery. It may be illegal to dispose of this battery improperly under local, state, or federal laws. Check with your local waste management officials for disposal and recycling options.



**CAUTION!**

**Electrostatic-Sensitive Device!**

**Use proper CMOS and MOSFET handling precautions, including approved grounded wrists straps, etc., to avoid damage to this unit or its internal components, from electric discharge.**

**WARNING!**

This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions in this manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to subpart J of part 15 of FCC rules which are designed to provide reasonable protection against such interference when operated in a commercial environment. This equipment has also been tested and found to comply with the requirements for a CE Class A device and TUV safety standards.

Operation of this equipment in a residential area may cause interference, in which case the user is required to take all measures that are necessary, at the user's expense, to correct the interference.

## **IMPORTANT INFORMATION**

Software and/or firmware is furnished to the purchaser under a license for use on a single system. Software and/or firmware included with this equipment are the sole proprietary property of, confidential to, and copyrighted by GE Interlogix, Corvallis, Oregon, USA. The software/firmware are not to be copied or disclosed in any manner without the express written consent of GE Interlogix.

All information and specifications furnished by GE Interlogix are believed to be accurate and reliable. No responsibility is assumed by GE Interlogix for neither its use nor any infringements of rights of third parties that may result from its use. No license is granted by implication or otherwise under any patent or patent rights of GE Interlogix.

The **CALIBUR™** brand name and product model numbers are the property of GE Interlogix.

**ÓCOPYRIGHT, 2001:** The contents of this manual may not be copied or reproduced in any manner or form without the prior written consent of GE Interlogix.



# CONTENTS

<b>1</b>	<b>FEATURES, CONNECTIONS, AND SETUP</b>	<b>1-1</b>
1.1	Product Description	1-1
1.2	Features	1-1
1.3	Unpacking	1-1
1.4	Installation Environment	1-2
1.5	Passwords	1-2
1.6	Front Panel Controls	1-2
1.7	Front Panel Display	1-3
1.8	Rear Panel Connections	1-3
1.9	Accessories I/O Port	1-6
1.10	Setting the Time and Date	1-8
1.11	Setting the Alarms	1-9
<b>2</b>	<b>USER OPERATIONS</b>	<b>2-1</b>
2.1	Recording	2-1
2.2	Playback	2-2
2.3	The Search Interface	2-4
2.4	Specifying Search Parameters	2-5
<b>3</b>	<b>THE MENU SYSTEM</b>	<b>3-1</b>
<b>4</b>	<b>OPERATOR PROGRAMMING</b>	<b>4-1</b>
4.1	Main Menu ® Time/Date	4-1
4.2	Main Menu ® Alarms	4-2
4.3	Main Menu ® Timer Settings	4-3
4.4	Main Menu ® Record Settings	4-5
4.5	Main Menu ® Display Settings	4-6
4.6	Main Menu ® Archive Setup	4-7
4.7	Main Menu ® Advanced Menu	4-12
<b>5</b>	<b>INSTALLER PROGRAMMING</b>	<b>5-1</b>
5.1	Advanced Menu ® Disk Overwrite Mode	5-1
5.2	Advanced Menu ® Disk Maintenance	5-2
5.3	Advanced Menu ® Audio Record Setting	5-3
5.4	Advanced Menu ® Auto Delete Mode	5-3
5.5	Advanced Menu ® Communications	5-4
5.6	Advanced Menu ® Multiplexer Format	5-5
5.7	Advanced Menu ® Adjust Picture	5-5
5.8	Advanced Menu ® Front Panel Lock	5-6

5.9	Advanced Menu ® Factory Settings.....	5-6
5.10	Advanced Menu ® Change Password.....	5-6
6	RS-232 REMOTE PROTOCOL.....	6-1
7	FACTORY DEFAULTS.....	7-1
8	TECHNICAL SPECIFICATIONS .....	8-1
9	WARRANTY AND SERVICE.....	9-1
9.1	Factory Service .....	9-1
9.2	Warranty and Return Information.....	9-2

# 1 FEATURES, CONNECTIONS, AND SETUP

---

## 1.1 Product Description

The DSR is a Digital Video Recorder designed to be a direct replacement for a Time Lapse VCR. Digital Video Recording allows the user to have continuous recording on a hard disk, without the need for replacing or rewinding of videotapes. The DSR provides menu based search capabilities for recorded events, as well as access to live or recorded data via the Ethernet.

## 1.2 Features

- Single channel VHS or SVHS Input / Output connection.
- Accepts Single Camera input or a Multiplexed input from most popular multiplexers.
- Compatible with Color or Monochrome cameras.
- Records up to 60 pictures per second (NTSC) or 50 pictures per second (PAL).
- Continuous Recording in Disk Overwrite mode.
- LCD on front panel indicates Time, Date, Mode, and Record Speed in pps.
- Video Archiving via the unit's SCSI port.
- Access to Live or Recorded video via the Ethernet.
- Continues Recording while Archiving, transmitting via the Ethernet, or during Playback.
- A simple on-screen menu system.
- Includes WaveReader software for viewing Live or Recorded images on a PC.
- Timed recording.
- Audio Recording.

## 1.3 Unpacking

Check the package and contents for visible damage. If any components are missing or damaged, contact the supplier immediately. **Do not attempt to use the unit.** If, for any reason they must be returned, the contents must be shipped in the original packaging.

### Package Contents

- The Kalatel DSR unit.
- Accessories PCB.
- The DSR user manual.
- WaveReader software with instruction manual.
- Archiving Addendum.

## 1.4 Installation Environment

**Power:** Ensure that the site's AC power is stable and within the rated voltage of the external power supply. If the site's AC power is likely to have spikes or power dips, use power line conditioning or an Uninterruptable Power Supply (UPS).

**Ventilation:** Install the unit in a well-ventilated area. Take note of the locations of the cooling vents in the unit's enclosure, and ensure that they are not obstructed.

**Temperature:** Observe the unit's ambient temperature specifications when choosing a location space. Extremes of heat or cold beyond the specified operating temperature limits may cause the unit to fail. Do not install the unit on top of other hot equipment.

**Moisture:** Do not expose the unit to rain or moisture. Moisture can damage the internal components. Do not install this unit near sources of water.

**Chassis:** You can place other equipment on top of the unit if it weighs less than 35 pounds.

## 1.5 Passwords

Figure 1-1 Passwords


Password Name	Function	Changeable by user?	Password
Advanced Menu Password	Provides access to the Advances menu for the installer.	Yes: See page 5-6	<b>3 4 7 7</b>
Factory Password	Restores the unit to the factory defaults.	No	<b>8 1 1 1</b>

A password is provided to limit access to the Advanced menu. It is recommended that the default password be changed after installation is complete. As a security measure, store the password in the administrator's secured files or in a limited access area. For instructions on entering the Advanced menu with the password see section **4.7 Main Menu** ® **Advanced Menu** on page 4-12.

A password is also provided to return the unit to the factory defaults. For instructions on returning the unit to the factory defaults, see section **0 Advanced Menu** ® **Factory Settings** on page 5-6.

## 1.6 Front Panel Controls

Figure 1-2 Front Panel

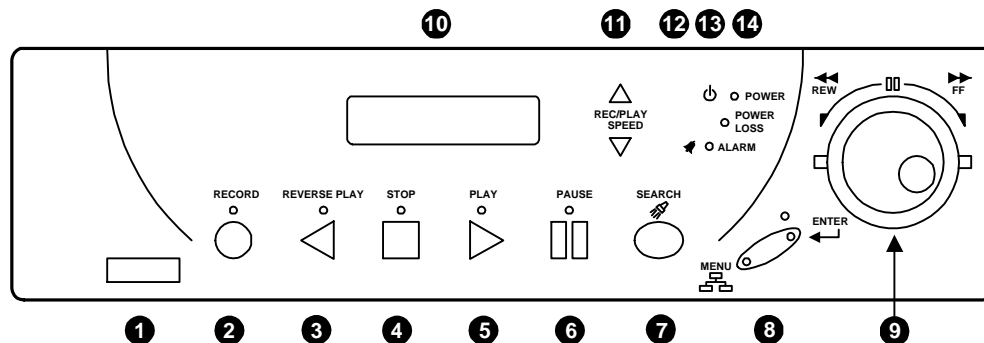

- 1. Infrared Port:** This feature is not yet available.
- 2. Record button:** Press this button to begin recording.
- 3. Reverse play button:** Press this button to playback video in reverse at the normal record speed.



4. **Stop button:** Press this button to stop Recording or Playback.
5. **Play Forward button:** Press this button to playback video at the normal record speed.
6. **Pause button:** Press this button to pause playback.
7. **Search button:** Press this button to enter the Search Filters menu.
8. **Combination Menu and Enter button:** Press the lower half of the button (the **Menu** button) to enter the Menu system. Also used to "Exit without saving" while in the menu system.


--OR--

Press the upper half of the button (the **Enter** button) to make or confirm a selection in the menu system.

9. **Jog / Shuttle:** The **Jog** (the inner of the two dials) is used for single frame advance while in Pause mode, it is also used to change the value of a parameter while in the menu system. The **Shuttle** (the outer of the two dials) is used to Fast Forward and Rewind while in the Play mode. The **Shuttle** is also used to navigate while in the menu system.
10. **LCD:** Displays the Time, Date, Mode, and Record or Playback speed in pictures per second (pps).
11. **Increase and Decrease Record Speed buttons:** Press these buttons to increase or decrease the Record or Playback speed.
12. **Alarm Indicator:** Indicates an alarm condition when the LED is lit.
13. **Power Loss Indicator:** Indicates power loss when LED is lit.
14. **Power On Indicator:** Indicates power is on when LED is lit.

## 1.7 Front Panel Display


Figure 1-3 LCD

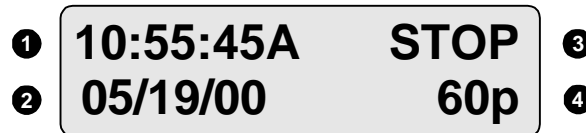

1. **Time:** Displays current time in Record and Stop mode. Displays time the event was recorded in Play and Pause modes.
2. **Date:** Displays current date in Record and Stop mode. Displays date the event was recorded in Play and Pause modes.
3. **Mode:** Displays the mode (Record, Play, Pause, Stop, Etc.) the unit is in.
4. **Record Speed:** Displays the normal record or playback speed in pps.

## 1.8 Rear Panel Connections

Figure 1-4 Rear Panel

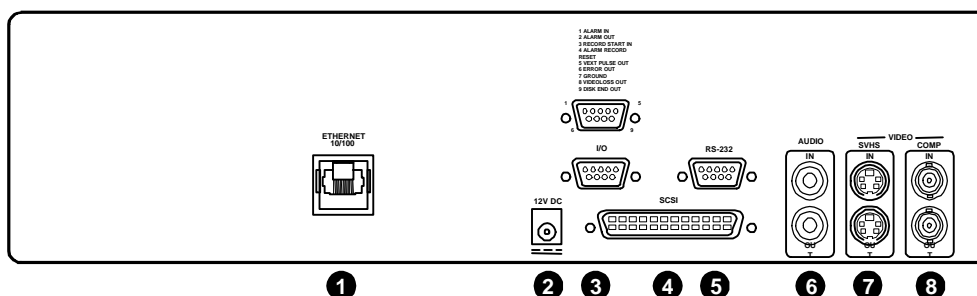

1. **Ethernet Port:** For viewing Live or Recorded images on a PC via the Ethernet.
2. **Power Connector:** Connect 12 Volt DC external power supply.
3. **I/O Port:** For connecting peripheral devices such as alarm devices, alarm relays, or the VEXT connection.
4. **SCSI Port:** For connecting an SCSI compatible archive device.
5. **RS-232 Serial Port:** Serial port for Flash Upgrading of software. Also for external control of unit.
6. **Audio In:** RCA jack, 315mV, 40k Ohms. Unbalanced.  
**Audio Out:** RCA jack, 315mV, 600 Ohms. Unbalanced.
7. **SVHS In:** Y/C video input with 4-pin mini-DIN style connector.  
**SVHS Out:** Y/C video output with 4-pin mini-DIN style connector.
8. **Video In:** Composite video input with BNC style connector.  
**Video Out:** Composite video output with BNC style connector.

**Caution:** Do not connect both video inputs at the same time.

## Ethernet Port

The cable connection configuration depends on your network configuration:

- For a DSR that connects directly to a Hub, use a Straight Through connection.
- For a DSR that connects directly to a PC, use a Cross Over connection.


Consult with your MIS personnel for the specific type of configuration. See section 5.5 Advanced Menu → Communications for information about configuring the ethernet settings in the menu system.

**Wire Type:** Cat 5  
**Connector Type:** RJ-45  
**Max Cable Length:** 100 feet / 30.5 meters  
**Minimum Cable Length:** 6 feet / 1.8 meters  
**Hub Wiring Configuration:** Straight Through  
**PC Wiring Configuration:** Cross Over

### RJ-45 Pin Configuration for Ethernet Port

Pin	Use
1	TX+
2	TX-
3	RX+
4	Not Connected

Pin	Use
5	Not Connected
6	RX-
7	Not Connected
8	Not Connected

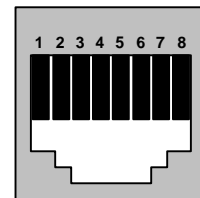

**RJ-45 socket on rear panel.**

## Power Connector

Power Supply Input
<b>Voltage:</b> 120 to 240 Volt AC
<b>Tolerance:</b> ±10%
<b>Frequency:</b> 50 to 60 Hz

Power Supply Output
<b>Voltage:</b> 12 Volt DC
<b>Power:</b> 35 Watt
<b>Connector:</b> 2.1mm barrel, Center Positive

## SCSI Port

The unit is equipped with a SCSI port for connecting external archive devices. The unit only supports a single SCSI device. The SCSI ID must be set to 0.

The SCSI bus must be terminated, otherwise the system will not operate properly.

Additional menu setup may be necessary to configure archive device. See section 4.6 Main Menu → Archive Setup.

<b>Connector:</b> 50 Pin, High Density SCSI-2.
<b>Gender (on unit):</b> Female
<b>Compatible devices:</b> DAT, AIT, CD-R, CD-RW
<b>Autoloader Support?:</b> Yes
<b>SCSI ID:</b> 0

## RS-232 Serial Port

Use a Null Modem cable when connecting to a PC. When connecting to a multiplexer, it may be necessary to construct a cable using the pin-out documentation of the MUX as a guide. See the pin-out configuration for the DSR below.


<b>Connector Type:</b> DB-9
<b>Gender (on unit):</b> Male
<b>Cable Required (Connected to PC):</b> Null Modem
<b>Cable Required (Connected to Multiplexer):</b> Variable, depending on pin-out configuration of MUX.

## DB-9 Pin Configuration for Serial Port

Pin	Use
1	DCD
2	RX
3	TX

Pin	Use
4	Not Connected
5	Ground
6	Not Connected

Pin	Use
7	RTS
8	CTS
9	Not Connected



**DB-9 on rear panel.**

## Video Input and Output

The unit is equipped with both Y/C and Composite inputs and outputs. The video inputs are auto terminating.

The SVHS input is Active Looping, and will only loop while the unit is on.

Do not connect both video inputs at the same time.

**SVHS Input:** 4-pin Mini-DIN connector.

**SVHS Output:** 4-pin Mini-DIN connector.

**SVHS Looping:** Only while unit is On.

**Composite Input:** 75 Ohm BNC connector.

**Composite Output:** 75 Ohm BNC connector.

**Composite Looping:** Yes, while unit is On or Off.

## 1.9 Accessories I/O Port

The rear panel of the unit is equipped with an Accessories Port (DB-9 style connector). Connect the Accessories PCB (supplied with the unit) to the Accessories Port. Wire all accessories to the Accessories PCB.

**Do not attempt to wire accessories directly to the DB-9 connector.**

If the Accessories PCB is lost or missing, contact GE Interlogix Customer Service for a replacement (Part Number 0900-0127a). As a substitute, purchase a female DB-9 connector and make all connections as shown in this section.



**DB-9 Connector on Rear Panel**

**Pin 1:** Alarm In.

**Pin 2:** Alarm Out.

**Pin 3:** Record Start In.

**Pin 4:** Alarm Record Reset.

**Pin 5:** VEXT Pulse Out.


**Pin 6:** Error Out.

**Pin 7:** Ground.

**Pin 8:** Videoloss Out.

**Pin 9:** Disk End Out.

**Pin 10:** Ground.

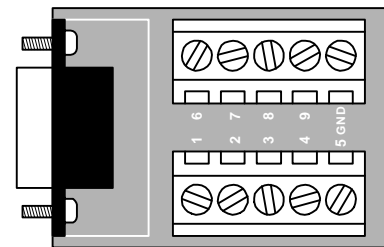

**Accessories PCB**

## Alarm In

An alarm condition can be activated by an Active Low TTL input or by relay contact devices such as pressure pads, passive infrareds, door switches, or other similar devices.

**Input:** Active Low TTL w/ pull-ups or Normally Open Relay.


**High:** 5V (12V tolerant)

**Low:** Ground

Minimum Duration: 0.5 Seconds



**Figure 1-5 Normally Open Relay Alarm Connection**

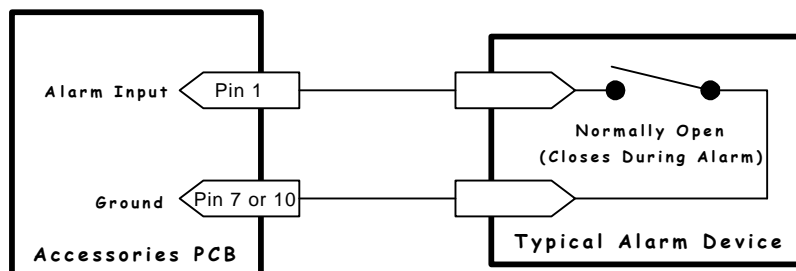


Refer to each alarm devices's manual for specific wiring details.

## Alarm Out

The Alarm output is activated when a teletext alarm is detected, or while the Alarm Input is active. The Alarm output is only active for the duration of the alarm event.


**Output:** Active Low  
**High:** 12V  
**Low:** Ground  
**Current Out:** 50mA Max  
**Short Circuit Protected.**



## Record Start In

Record Start In will place the unit in Record mode when activated. Compatible with the Disk End Out signal from a second unit.

**Input:** Active Low TTL w/ pull-ups  
or Normally Open Relay.  
**High:** 5V (12V tolerant)  
**Low:** Ground



## Alarm Record Reset

This feature is for future development, and has not yet been implemented.

## VEXT Pulse Out


The Video External Pulse connection (VEXT) simplifies multiplexer operation by automatically synchronizing the Multiplexer and the DSR.

The DSR sends a VEXT pulse to the Multiplexer indicating that it is ready to record the next image. The Multiplexer responds by sending the next image to the Video Input on the DSR.

The VEXT connection is especially beneficial for units configured with dual record speeds (Normal and Alarm).

**Use of the VEXT connection is Highly Recommended when connecting the unit to a multiplexer.**


**Output:** Active Low  
**High:** 5V  
**Low:** Ground (0.8V Max)  
**Current Out:** 50mA Max  
**Short Circuit Protected.**



## Error Out

The Error Out signal is activated when the unit experiences any operational or internal error.

**Output:** Open Collector  
**High:** Transistor Off  
**Low:** Transistor On  
**Active When On.**  
**Current Out:** 10mA Max  
**Minimum Duration: 0.5 Seconds**




## Videoloss Out

The Videoloss Out signal is activated when the unit experiences videoloss on the selected video input (Composite or SVHS).

In the event of videoloss, **VIDEOLOSS** will be indicated near the upper left hand corner of the primary monitor.


**Output:** Open Collector  
**High:** Transistor Off  
**Low:** Transistor On  
**Active When On.**  
**Current Out:** 10mA Max  
**Minimum Duration: 0.5 Seconds**



## Disk End Out

The Disk End Out is activated when there is 5 minutes of recording space left on the hard disk. It will also be activated if a DAT or AIT tape archiving device is connected, and the tape end is encountered. The DSR must be in Record mode, with Background Archiving ON, and set to Continuous Overwrite mode.

**Output:** Open Collector  
**High:** Transistor Off  
**Low:** Transistor On  
**Active When On.**  
**Current Out:** 10mA Max  
Minimum Duration: 0.5 Seconds

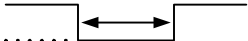

## 1.10 Setting the Time and Date

It is recommended that, as a minimum, the following menu items be configured before using the unit. For detailed information about using the menu system, see section 3.

### ☐ Main Menu ® Time/Date ® Set Time Format


To set the Time format, use the **Jog** to select the desired Time format. Format the time as either:

- 12 HOUR
- 24 HOUR

Press the **Enter** button to confirm the selection and exit the menu.

--OR--

Press the **Menu** button to exit the menu without making changes.

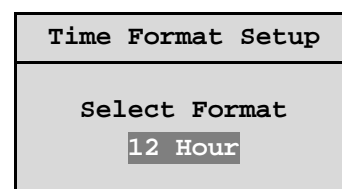

### ☐ Main Menu ® Time/Date ® Set Date Format


To set the Date format, use the **Jog** to select the desired Date format. Format the Date as either:

- DD/MM/YY
- MM/DD/YY
- YY/MM/DD

Press the **Enter** button to confirm the selection and exit the menu.

--OR--

Press the **Menu** button to exit the menu without making changes.

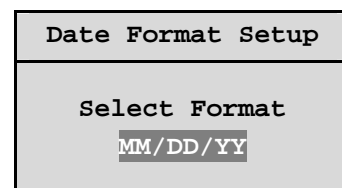


### ☐ Main Menu ® Time/Date ® Set Time

To set the Time:

1. With **HH MM SS** highlighted, press the **Enter** button. The highlighting will move to the row of numbers.
2. Enter the time in Hours, Minutes, and Seconds. Use the **Jog** to change the values. Use the **Shuttle** to navigate among the three fields.
3. Press the **Enter** button to confirm the selection.
4. **To Save the changes and Exit the menu:** Use the **Jog** to select **[OK]**, then press the **Enter** button.

--OR--

5. **To Exit the menu without making changes:** Use the **Jog** to select **[CANCEL]**, then press the **Enter** button.

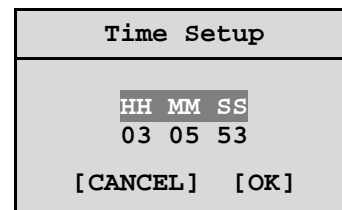

## □ Main Menu ® Time/Date ® Set Date

To set the Date:

1. With **MM DD YY DAY** highlighted, press the **Enter** button. The highlighting will move to the row of numbers.
2. Enter the date in Months, Days, Years. Day of the Week will update automatically. Use the **Jog** to change the values. Use the **Shuttle** to navigate among the three fields.
3. Press the **Enter** button to confirm the selection.
4. **To Save the changes and Exit the menu:** Use the **Jog** to select **[OK]**, then press the **Enter** button.

Date Setup	
MM DD YY DAY	
12 17 00 SUN	
[CANCEL]	[OK]

--OR--

5. **To Exit the menu without making changes:** Use the **Jog** to select **[CANCEL]**, then press the **Enter** button.

## 1.11 Setting the Alarms

### □ Main Menu ® Alarms

Use this menu to specify:

- Whether an alarm condition will be activated when the unit detects a signal on the Alarm In connection.
- Whether a teletext alarm signal (generated by a multiplexer or other device) will cause the unit to activate an alarm condition.
- Whether the internal buzzer is activated during an alarm condition.

Alarms Menu	
Hardwire Alarm :	Enable
Teletext Alarm :	Disable
Alarm Buzzer :	Enable
[CANCEL]	[OK]

To configure the alarm settings:

1. Use the **Shuttle** to navigate among the fields.
2. Use the **Jog** to change the values of the highlighted fields.
3. **To Save the changes and Exit the menu:** Use the **Jog** to select **[OK]**, then press the **Enter** button.

Alarms Menu	
Hardwire Alarm :	Enable
Teletext Alarm :	Disable
Alarm Buzzer :	Enable
[CANCEL]	[OK]

--OR--

4. **To Exit the menu without making changes:** Use the **Jog** to select **[CANCEL]**, then press the **Enter** button.





# 2 USER OPERATIONS


## 2.1 Recording

To begin recording, press the **Record** button. **RECORD** will be indicated for three seconds, near the upper left hand corner of the primary monitor. The unit always starts recording at the end of the previously recorded data.

Recording will continue until:


- Another mode is selected (Play mode, or Stop mode).
- The disk is full (In No Overwrite and Overwrite Once modes). See section **5.1 Advanced Menu ® Disk Overwrite Mode** on page 5-1, for details regarding Disk Overwrite modes.

RECORD

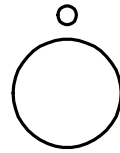

Record button

Figure 2-1 LCD in Record mode

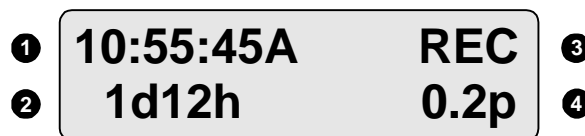

1. Current time.
2. Record time left until disk full.
3. Record Mode Indicated.
4. Normal Record Speed in Pictures Per Second. If the letter **A** precedes the record rate, the unit is configured to record or playback audio.

### Normal Recording

The unit records at the normal record speed until an alarm condition is detected. The normal record speed is indicated on the LCD, and can be altered using the **Up/Down Record Speed** buttons, or in the menu system.

For information about altering the normal record speed from the menu system, see **Main Menu ® Record Settings ® Normal Record Speed**, on page 4-5 of the Operator Programming section of this manual.

The normal record speed can be altered while the unit is recording. The unit will continue recording while the menu system is active.



Record Speed buttons

## Alarm Recording

When an alarm condition is detected, the unit automatically switches to the alarm record speed. The alarm condition is indicated in several ways:

- With the word **ALARM**, displayed on the primary monitor, near the upper left hand corner of the screen.
- With the LED Alarm Indicator on the front panel of the unit.
- With the internal buzzer (if activated in the menu system). For information about activating the internal buzzer during alarms, see **Main Menu** ® **Alarms** on page 4-2 of the Operator programming section of this manual.
- By an external device, connected to the alarm output of the unit (if the unit is installed that way).

🔊 ○ ALARM

Alarm Indicator

The alarm record speed cannot be changed using the **Up/Down Record Speed** buttons on the front panel. The alarm record speed must be changed in the menu system. For information about altering the alarm record speed, see **Main Menu** ® **Record Settings** ® **Alarm Record Speed**, on page 4-5 of the Operator Programming section of this manual.

The front panel LCD displays the normal record speed during and alarm condition.

The unit returns to the normal record speed when the alarm condition ends.

## Disk Nearly Full Notification

This message will appear on the primary monitor to indicate that the unit has stopped recording, because the disk is full.

**In No Overwrite mode:** The user must acknowledge the on-screen message by pressing the **Enter** button.




Unit will not record over previously recorded data. To continue recording, the data must be erased (or deleted) in the **Advanced** ® **Disk Maintenance** menu.

**In Overwrite Once mode:** The user must acknowledge the on-screen message by pressing the **Enter** button.

The unit will continue recording again when the user presses the **Record** button.

## 2.2 Playback

Figure 2-2 LCD during playback

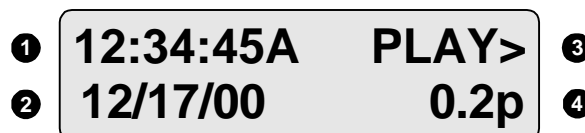

1. Time the data was recorded.
2. Date the data was recorded.
3. Play Forward mode indicated.
4. Normal record speed in Pictures Per Second. If the letter **A** precedes the record rate, the unit is configured to record or playback audio.


## Play Forward

To begin normal playback, press the **Play Forward** button. The unit will begin playing back data from the beginning of the last recording session.

Playback is indicated:

- As **PLAY** near the upper left hand corner of the primary monitor, for three seconds.
- As **PLAY>** on the LCD.

PLAY  
○



Play Forward button


## Reverse Play

To begin reverse playback, press the **Reverse play** button. The unit will begin playing back data from the beginning of the last recording session.

Reverse playback is indicated:

- As **REVERSE PLAY** near the upper left hand corner of the primary monitor, for three seconds.
- As **PLAY<** on the LCD.

REVERSE PLAY  
○



Reverse play button

If there is only one recording session on the hard disk, the unit will indicate **START OF DATA** on the primary monitor.

## Playback Speed

The unit will playback the data at the rate it was recorded. The user can alter the playback speed using the **Up/Down Record Speed** buttons.

Altering the playback speed overrides any change in playback speed that would occur due to an alarm condition in the playback. To clear the override, press the **Stop** button, then press the **Play** button to resume playback at the speed the data was recorded.

The playback speed is indicated on the LCD in Pictures Per Second.



REC/PLAY  
SPEED




Record Speed buttons

## Fast Forward

During playback, rotate the **Shuttle** clockwise to view the data at a Higher than normal rate. Increasing the amount of rotation increases the rate of playback.

Fast Forward is indicated:

- As **FAST FORWARD** near the upper left hand corner of the primary monitor, for three seconds.
- As **FFWD** on the LCD.

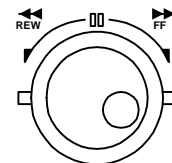


Jog / Shuttle

## Rewind

During playback, rotate the **Shuttle** counter-clockwise to view the data (in reverse) at a Higher than normal rate. Increasing the amount of rotation increases the rate of playback.

Rewind is indicated:

- As **REWIND** near the upper left hand corner of the primary monitor, for three seconds.
- As **REW** on the LCD.

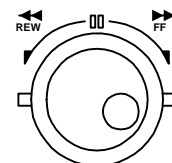


Jog / Shuttle

## Pause

During playback, press the **Pause** button to pause playback, and display a single frame on-screen.


Pause is indicated:

- As **PAUSE** near the upper left hand corner of the primary monitor, for three seconds.
- As **PAUSE** on the LCD.

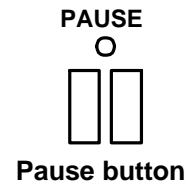

## Single Frame Advance & Single Frame Rewind

During Pause mode, rotate the **Jog** dial to view the frame directly before or after the frame displayed on-screen.

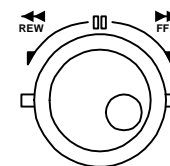

Jog / Shuttle

## Start of Data & End of Data

If the start or end of data is reached during playback, **START OF DATA** or **END OF DATA** is indicated near the upper left hand corner of the primary monitor.

## 2.3 The Search Interface

The Search Interface feature allows the user to search the hard disk for recorded events, such as an alarm condition, or a previous recording session. For example, each time Record mode is activated, it is considered a separate recording session.

To enter the Search Filters menu, press the **Search** button. The Search Filters menu is displayed on the primary monitor.



Use this to specify:

- The Start and Stop date of the search.
- The Start and Stop time of the search.
- Which cameras to search exclusively.
- To search for recorded alarms.

Search Filters			
	Start		Stop
DATE:	12/25/00 [ ]		01/01/01 [ ]
	(MM/DD/YY)		(MM/DD/YY)
	Start		Stop
TIME:	11:11:21 [ ]		12:34:34 [ ]
	1 2 3 4 5 6 7 8		
CAMERA:	[ ] [ ] [ ] [ ] [ ] [ ] [ ] [ ]		
ALARM:	[ ]		
	[ CANCEL ]		[ START SEARCH ]

## Searching for All Recorded Events

Using the **Shuttle** to navigate, highlight [ **START SEARCH** ], then press the **Enter** button. The Search Results window will appear. For information about selecting a recorded event, see **Selecting from the Search Results**, in this section.

## 2.4 Specifying Search Parameters

### Selecting a Start and Stop Date

1. Using the **Shuttle** to navigate, highlight the **DATE** parameter, then press the **Enter** button. The unit will enter Edit mode.
2. Use the **Jog** to change the start and stop date values. Use the **Shuttle** to navigate among the different parameters.
3. To activate the start or stop date parameter, use the **Jog** to place an [ **x** ] in the check box.
4. Press the **Enter** button at any time to exit Edit mode.

### Selecting a Start and Stop Time

1. Using the **Shuttle** to navigate, highlight the **TIME** parameter, then press the **Enter** button. The unit will enter Edit mode.
2. Use the **Jog** to change the start and stop time values. Use the **Shuttle** to navigate among the different parameters.
3. To activate the start or stop time parameter, use the **Jog** to place an [ **x** ] in the check box.
4. Press the **Enter** button at any time to exit Edit mode.

### Selecting Cameras to Search

1. Using the **Shuttle** to navigate, highlight the **CAMERA** parameter, then press the **Enter** button. The unit will enter Edit mode.
2. Use the **Shuttle** to navigate among the different cameras.
3. Use the **Jog** to select a camera (or cameras) by placing an [ **x** ] in the check box.
4. Press the **Enter** button at any time to exit Edit mode.

### Searching for Recorded Alarms

1. Using the **Shuttle** to navigate, highlight the **ALARM** parameter, then press the **Enter** button. The unit will enter Edit mode.
2. Use the **Jog** to activate the alarms search, by placing an [ **x** ] in the check box.
3. Press the **Enter** button at any time to exit Edit mode.

## Starting the Search

Using the **Shuttle** to navigate, highlight the [**START SEARCH**] parameter, then press the **Enter** button. The Search Results menu will appear.

Search Results				
	Start Date	Start Time	Days	HH MM SS
000	01/01/00	00:07:14	0	00:00:36
001	01/01/00	23:35:20	0	00:08:11
002	02/12/00	23:43:30	0	00:33:49
003	02/12/00	00:17:23	0	01:38:18

"ENTER" to play

## Selecting from the Search Results

Use the **Shuttle** to select a recorded event.

Press the **Enter** button to select the event, or press the **Menu** button to exit the Search Results menu.

# 3 THE MENU SYSTEM

---

This section provides a brief overview of the menu system, for complete information about Operator and Installer programming, see section 4: **Operator Programming**, or section 5: **Installer Programming**.

## How to use this Manual

Throughout this manual, there are headings like these.

### ❑ Main Menu ® Timer Settings

**Meaning:** From the Main menu, select **TIMER SETTINGS**, then press the **Enter** button. A Pop-up or Pull down menu will appear.

### ❑ Main Menu ® Record Settings ® Normal Record Speed

**Meaning:** From the Main menu, select **RECORD SETTINGS**, then press the **Enter** button. This opens another menu. In this menu, select **NORMAL RECORD SPEED**, then press the **Enter** button.

A Pop-up or Pull down menu will appear.

## Pull-down Menus

Pull-down menus are the top-level menus. Make a selection in a Pull-down menu to enter the appropriate sub-menu (typically a Pop-up menu). Changes to the unit's parameters are usually made in Pop-up menus.

To exit a Pull-down menu, press the **Menu** button.


## Pop-up Menus

Pop-up menus usually have a parameter (or several parameters), from which the user can make a selection or change the value.

Use the **Shuttle** to select a new parameter, use the **Jog** to change the value of that parameter.

**To Save changes and Exit the menu:** Select [OK], then press the **Enter** button.


**To Exit the menu without making changes:** Press the **Menu** button or select [CANCEL], then press the **Enter** button.

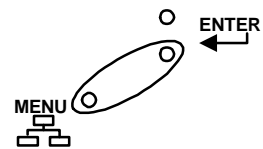

Menu button

In some boxes, items are highlighted on the screen. They are represented in this manual as follows:

**Not highlighted:**




**Highlighted:**



## Entering the Main menu

Enter the Main menu by pressing the **Menu** button. The Main menu will appear on the primary monitor.

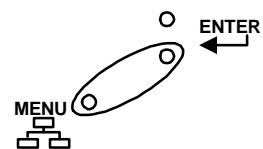

Menu button

## The Main Menu

The Main menu provides access to all of the operator programmable options. Each sub-section of the Main menu is described briefly in this section.

For complete information about operator programming in the Main menu, see section 4.

Time/Date
Alarms
Timer Settings
Record Settings
Display Settings
Archive Setup
Advanced Menu

### □ Main Menu ® Time/Date

Use this menu to specify:

- The time format: 12 or 24 hours.
- The date format: MM/DD/YY, DD/MM/YY, or YY/MM/DD.
- The time.
- The date.

Set Time Format
Set Date Format
Set Time
Set Date

### □ Main Menu ® Alarms

Use this menu to specify:

- Whether an alarm condition will be activated when the unit detects a signal on the Alarm In connection.
- Whether a teletext alarm signal (generated by a multiplexer or other device) will cause the unit to activate an alarm condition.
- Whether the internal buzzer is activated during an alarm condition.

Alarms Menu	
Hardwire Alarm :	Enable
Teletext Alarm :	Disable
Alarm Buzzer :	Enable
[CANCEL]	[OK]



## ❑ Main Menu ® Timer Settings

This menu allows the user to program a timed-recorded event. Use this menu to specify:

- The date, or days on which the recording will occur.
- The start and stop time.
- The record speed.
- The record quality.
- Whether the event is enabled.

DAY	START	STOP	SPD(pps)	QUALITY	ON/OFF
31	16:45	17:05	20	High	On
SAT	07:55	08:10	10	Med	Off
MON-FRI	09:56	11:05	60	Low	On
SAT-SUN	14:23	14:50	60	High	On
MON-SUN	02:23	03:34	20	Med	Off
--	--:--	--:--	--	--	--
			[OK]		
EDIT Mode			Hit "ENTER" To Toggle EDIT Mode		

## ❑ Main Menu ® Record Settings

Use this menu to specify:

- Which video input on the rear panel is activated.
- The record speed during Normal recording.
- The record speed when the unit detects an alarm condition.
- The recorded picture quality.

Record Input
Normal Record Speed
Alarm Record Speed
Video Quality

## ❑ Main Menu ® Display Settings

Use this menu to specify what status information will be displayed on the primary monitor. Select On or Off, for the following items.

- The current time and date.
- The remaining amount of time before the hard disk runs out of record space.
- The Archive Status.
- The time and date of the last alarm.
- During Playback, the time and date the recording was made.

Current Time / Date
Record Capacity
Archive Status
Last Alarm
Playback Time / Date

## ❑ Main Menu ® Archive Setup

Use this menu to:

- Select data to be archived and begin archiving process.
- Restore data from archive device.
- Enable background archiving.
- Specify how the unit will handle overwrite issues when the archive medium becomes full.
- Erase the archived data.

Selective archive
Restore from archive
Background archive
Archive Overwrite Mode
Erase Archive Medium

## Main Menu ® Advanced Menu

To access the Advanced menu:

1. Select **ADVANCED MENU** from the Main menu, then press the **Enter** button. The Password Box will appear.
2. Enter the Advanced menu password. Use the **Jog** to select a character, then use the **Enter** button to complete the selection, and move to the next character.
3. Pressing the **Enter** button on the last character will complete the password selection and the unit will display the Advanced menu.

Password Box
Please Enter The Password! 0----

## The Advanced Menu

For security reasons, a password is provided to limit access to the Advanced menu. For instructions about entering the Advanced menu, see **Main Menu ® Advanced Menu**, on the previous page.

The Advanced menu provides access to all of the installer programmable options. Each sub-section of the Advanced menu is described briefly in this section.

For complete information about installer programming in the Advanced menu, see section 5.

Disk Overwrite Mode
Disk Maintenance
Audio Record Setting
Auto Delete Mode
Communications
Multiplexer Format
Adjust Picture
Front Panel Lock
Factory Settings
Change Password

### ❑ Advanced Menu ® Disk Overwrite Mode

Use this menu to specify how the unit will handle disk overwrite issues once the hard disk becomes full. Select either:

- No Overwrite.
- Overwrite Once.
- Continuous Overwrite.

Disk Overwrite Mode
Select Mode
Continuous Overwrite

### ❑ Advanced Menu ® Disk Maintenance

The user can have previously recorded information:

- Deleted (with the possibility of restoring it).
- Undeleted (restored if it has not yet been overwritten).
- Erased (removed with no possibility of restoring it).

Delete
Undelete
Erase

### ❑ **Advanced Menu** ® **Audio Record Setting**

Use this menu to:

- Select Off and Disable the audio recording capability.
- Select G.711 and Enable the audio recording capability.

OFF  
G.711 (64kb/s)

### ❑ **Advanced Menu** ® **Auto Delete Mode**

Configuring the unit with the Auto Delete mode **ON** prevents the unit from displaying or archiving any data that is more than 30 days old. This feature may be required by law in some jurisdictions, please consult with the local authorities.

OFF  
ON

### ❑ **Advanced Menu** ® **Communications**

Use this menu to specify:

- The data transfer rate for the RS-232 serial port.
- The units Ethernet network connection settings.

Baud Rate  
Ethernet

### ❑ **Advanced Menu** ® **Multiplexer Format**

The DSR is compatible with several different brands of multiplexers. Use this menu to specify the Playback format of the multiplexer. If the unit is not connected to a multiplexer, select **NONE**.

**Note:** The Navco multiplexer is only available on NTSC units.

None  
Kalatel  
Robot  
DM  
Philips  
Pelco  
Sanyo  
Navco  
ATV

### ❑ **Advanced Menu** ® **Adjust Picture**

Use this menu to specify the Brightness, Contrast, and Saturation of the video input. Adjustments made to the video input will alter the recorded image.

Brightness  
Contrast  
Saturation

### ❑ **Advanced Menu** ® **Front Panel Lock**

Use this menu to Lock or Unlock the front panel.

Unlock Keyboard  
Lock Keyboard

❑ **Advanced Menu ® Factory Settings**

Use this menu to enter the Factory Password, and restore the unit to the factory defaults.

Password Box
Please enter the Factory Password ○---

❑ **Advanced Menu ® Change Password**

Use this menu to change the Advanced Menu Password.

Password Box
Enter a new Password ○---

# 4 OPERATOR PROGRAMMING

---

## 4.1 Main Menu <sup>®</sup> Time/Date

Use this menu to specify:

- The time format: 12 or 24 hours.
- The date format: MM/DD/YY, DD/MM/YY, or YY/MM/DD.
- The time.
- The date.

Set Time Format
Set Date Format
Set Time
Set Date

### □ Main Menu <sup>®</sup> Time/Date <sup>®</sup> Set Time Format

To set the Time format, use the **Jog** to select the desired Time format. Format the time as either:

- 12 HOUR
- 24 HOUR

Time Format Setup
-------------------

Select Format
12 HOUR

Press the **Enter** button to confirm the selection and exit the menu.

--OR--

Press the **Menu** button to exit the menu without making changes.

### □ Main Menu <sup>®</sup> Time/Date <sup>®</sup> Set Date Format

To set the Date format, use the **Jog** to select the desired Date format. Format the Date as either:

- DD/MM/YY
- MM/DD/YY
- YY/MM/DD

Date Format Setup
-------------------

Select Format
MM/DD/YY

Press the **Enter** button to confirm the selection and exit the menu.

--OR--

Press the **Menu** button to exit the menu without making changes.

## □ Main Menu ® Time/Date ® Set Time

To set the Time:

1. With **HH MM SS** highlighted, press the **Enter** button. The highlighting will move to the row of numbers.
2. Enter the time in Hours, Minutes, and Seconds. Use the **Jog** to change the values. Use the **Shuttle** to navigate among the three fields.
3. Press the **Enter** button to confirm the selection.
4. **To Save the changes and Exit the menu:** Use the **Jog** to select **[OK]**, then press the **Enter** button.

Time Setup	
HH MM SS	
03 05 53	
[CANCEL]	[OK]

--OR--

5. **To Exit the menu without making changes:** Use the **Jog** to select **[CANCEL]**, then press the **Enter** button.

## □ Main Menu ® Time/Date ® Set Date

To set the Date:

1. Press the **Enter** button. The highlighting will move to the row of numbers.
2. Enter the date in Months, Days, Years. Day of the Week will update automatically. Use the **Jog** to change the values. Use the **Shuttle** to navigate among the three fields.
3. Press the **Enter** button to confirm the selection.
4. **To Save the changes and Exit the menu:** Use the **Jog** to select **[OK]**, then press the **Enter** button.

Date Setup	
MM DD YY DAY	
12 17 00 SUN	
[CANCEL]	[OK]

--OR--

5. **To Exit the menu without making changes:** Use the **Jog** to select **[CANCEL]**, then press the **Enter** button.

## 4.2 Main Menu ® Alarms

Use this menu to specify:

- Whether an alarm condition will be activated when the unit detects a signal on the Alarm In connection.
- Whether a teletext alarm signal (generated by a multiplexer or other device) will cause the unit to activate an alarm condition.
- Whether the internal buzzer is activated during an alarm condition.

Alarms Menu	
Hardwire Alarm :	Enable
Teletext Alarm :	Disable
Alarm Buzzer :	Enable
[CANCEL]	[OK]

A feature unique to the DSR is its ability to detect alarms via teletext provided within the video signal. Standard Time Lapse VCRs can only detect an alarm if the alarm output signal of the Mux is wired directly to the alarm input of the VCR using the VEXT connection.

This teletext alarm detecting feature of the DSR is compatible with the following styles of Multiplexers:

- Kalatel
- Philips
- Robot
- Pelco
- Sanyo
- ATV

## Connecting to Dedicated Micros (DM)

When connecting to a Dedicated Micros multiplexer:

- It is necessary to connect the alarm output of the Mux to the alarm input of the DSR (as you would do when connecting the alarm input on standard time-lapse VCR).
- It is necessary to configure the **Main Menu** ® **Alarms** ® **Hardware Alarm** as **Enabled**.
- It is necessary to configure the **Main Menu** ® **Alarms** ® **Teletext Alarm** as **Disable**.

To configure the alarm settings:

1. Use the **Shuttle** to navigate among the fields.
2. Use the **Jog** to change the values of the highlighted fields.
3. **To Save the changes and Exit the menu:** Use the **Jog** to select [OK], then press the **Enter** button.

Alarm Menu	
Hardwire Alarm :	Enable
Teletext Alarm :	Disable
Alarm Buzzer :	Enable
[CANCEL]	[OK]

--OR--

4. **To Exit the menu without making changes:** Use the **Jog** to select [CANCEL], then press the **Enter** button.

## 4.3 Main Menu ® Timer Settings

This menu allows the user to program a timed-recorded event. Use this menu to specify:

- The date, or days on which the recording will occur.
- The start and stop time.
- The record speed.
- The record quality.
- Whether the event is enabled.

DATE	START	STOP	SPD(pps)	QUALITY	ON/OFF
31	16:45	17:05	20	High	On
Sat	07:55	08:10	10	Med	Off
Mon-Fri	09:56	11:05	60	Low	On
Sat-Sun	14:23	14:50	60	High	On
Mon-Sun	02:23	03:34	20	Med	Off
--	--:--	--:--	--	--	--
			[OK]		
EDIT Mode			Hit "ENTER" To Toggle EDIT Mode		

### Creating a Timed Recording:

1. Using the **Jog / Shuttle** to navigate, highlight the **DATE** parameter of the last line item (indicated with double dash marks).

2. Press the **Enter** button to enter the Edit mode. **EDIT MODE** will appear on-screen, in the lower left-hand corner of the Timer Settings menu. The user may press the **Enter** button to exit Edit mode at any time.
3. Use the **Jog** to change the values of the **DATE** setting.

<b>Date (Day of the Month)</b>	1 through 31
<b>Day of the Week</b>	Monday through Sunday
<b>Range of Days</b>	All Weekdays (Monday-Friday), All Weekend Days (Saturday-Sunday), Monday-Sunday (Everyday)

4. When finished entering the Date, use the **Shuttle** to navigate the **START** setting.
5. Use the **Jog / Shuttle** to enter the time the recording will begin. The Hours and Minutes are edited separately. The start and stop times are always configured in a 24-hour clock. When finished entering the start time, use the **Shuttle** to navigate to the **STOP** setting.
6. Use the **Jog / Shuttle** to enter the time the recording will end. Entering a time "before" the start time will cause the unit to record until the indicated stop time on the next day. When finished entering the stop time, use the **Shuttle** to navigate to the **SPD** setting.
7. Use the **Jog** to enter the record speed in pictures per second.

<b>NTSC Record Speeds</b>	60, 30, 20, 10, 5, 3, 2, 1, 0.5, 0.2, 0.1, 0.0
<b>PAL Record Speeds</b>	50, 25, 17, 10, 5, 3, 2, 1, 0.5, 0.2, 0.1, 0.0

8. When finished entering the Record Speed, use the **Shuttle** to navigate to the **QUALITY** setting.
9. Use the **Jog** to enter the record quality (Low, Medium, or High). Higher record quality settings use more disk space.
10. When finished entering the Record Quality, use the **Shuttle** to navigate to the **ON/OFF** setting.
11. Use the **Jog** to Activate, Deactivate, or Delete the recording.
12. When finished, press the **Enter** button to exit the Edit mode. Use the **Jog / Shuttle** to navigate to [**OK**], then press the **Enter** button to complete the selection.

### Editing a Timed Recording:

1. Using the **Jog / Shuttle** to navigate, highlight the event parameter you wish to edit.
2. Press the **Enter** button to enter the Edit mode. **EDIT MODE** will appear on-screen, in the lower left-hand corner of the pop-up menu.
3. Use the **Jog** to change the values. Use the **Shuttle** to navigate among parameters in the same row.
4. When finished, press the **Enter** button to exit the Edit mode. Use the **Jog / Shuttle** to navigate to [**OK**], then press the **Enter** button to complete the selection.

### Deleting a Timed Recording:

1. Using the **Jog / Shuttle** to navigate, highlight the **ON/OFF** parameter of the event you wish to delete.
2. Press the **Enter** button to enter the Edit mode.



3. Use the **Jog** to select **DEL** from the menu.
4. Press the **Enter** button to confirm the selection and exit the Edit mode.
5. Use the **Jog / Shuttle** to navigate to [OK], then press the **Enter** button to remove the selection and exit the menu.

## 4.4 Main Menu <sup>®</sup> Record Settings

Use this menu to specify:

- Which video input on the rear panel is activated.
- The record speed during Normal recording.
- The record speed when the unit detects an alarm condition.
- The recorded picture quality.

Record Input
Normal Record Speed
Alarm Record Speed
Video Quality

### ☐ Main Menu <sup>®</sup> Record Settings <sup>®</sup> Record Input

To select a video input, use the **Jog** select either **COMPOSITE VIDEO** or **SVHS VIDEO**.

Composite Video
SVHS Video

**Composite Video:** Video input with BNC style connector.

**SVHS Video:** Y/C video input with 4-pin mini-DIN style connector.

Press the **Enter** button to confirm the selection and exit the menu.

--OR--

Press the **Menu** button to exit the menu without making changes.

<b>Caution:</b> Do not connect both video inputs at the same time.
--

### ☐ Main Menu <sup>®</sup> Record Settings <sup>®</sup> Normal Record Speed

Use the **Jog** to select the desired Normal Record Speed.

**Normal Record Speeds:**

**NTSC:** 60, 30, 20, 10, 5, 3, 2, 1, 0.5, 0.2, 0.1, 0.0.

**PAL:** 50, 25, 17, 10, 5, 3, 2, 1, 0.5, 0.2, 0.1, 0.0.

When the Normal Record Speed is set to 0.0, the unit will only record while an alarm is active.

Press the **Enter** button to confirm the selection and exit the menu.

--OR--

Press the **Menu** button to exit the menu without making changes.

Normal Record Speed
Pictures Per Second
5

### ☐ Main Menu <sup>®</sup> Record Settings <sup>®</sup> Alarm Record Speed

Use the **Jog** to select the desired Alarm Record Speed.

**Alarm Record Speeds:**

**NTSC:** 60, 30, 20, 10, 5, 3, 2, 1, 0.5, 0.2, 0.1.

**PAL:** 50, 25, 17, 10, 5, 3, 2, 1, 0.5, 0.2, 0.1.

Press the **Enter** button to confirm the selection and exit the menu.


--OR--

Press the **Menu** button to exit the menu without making changes.

Alarm Record Speed
Pictures Per Second
60

## ❑ Main Menu ® Record Settings ® Video Quality

Use the **Jog** to select the desired Record Quality. Select **High**, **Med** or **Low**. Higher record quality's use lower compression, requiring more disk space. Press the **Enter** button to confirm the selection and exit the menu.

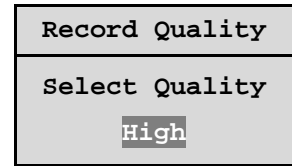


--OR--

Press the **Menu** button to exit the menu without making changes.

## 4.5 Main Menu ® Display Settings


Use this menu to specify what status information will be displayed on the primary monitor. Select On or Off, for the following items.

- The current time and date.
- The remaining amount of time before the hard disk runs out of record space.
- The Archive Status.
- The time and date of the last alarm.
- During Playback, the time and date the recording was made.

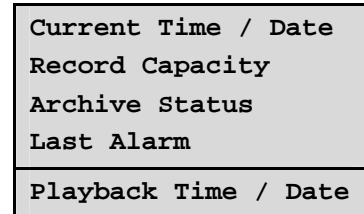

### ❑ Main Menu ® Display Settings ® Current Time / Date

To display the current Time and Date near the upper right hand corner of the primary monitor, select **ON**. Use the **Jog** to select **on** or **off**.




Press the **Enter** button to confirm the selection and exit the menu.

--OR--

Press the **Menu** button to exit the menu without making changes.

### ❑ Main Menu ® Display Settings ® Record Capacity

Select **ON**, to display the amount of time remaining before the hard disk runs out of record space. The data is displayed near the upper left hand corner of the primary monitor. The unit displays the Record Capacity with two measures of time, and switches automatically depending on the amount of time remaining:



- Days and Hours
- Hours and Minutes
- Minutes and Seconds

Use the **Jog** to select **ON** or **OFF**.

Press the **Enter** button to confirm the selection and exit the menu.

--OR--

Press the **Menu** button to exit the menu without making changes.

#### ☐ Main Menu ® Display Settings ® Archive Status

To display the archive status near the upper center of the screen on the primary monitor, select **ON**. The unit will display either:

OFF
ON

- ARCHIVE NOT CONNECTED.
- ARCHIVE READY.
- ARCHIVE NOT READY.

Use the **Jog** to select **ON** or **OFF**.

Press the **Enter** button to confirm the selection and exit the menu.

--OR--

Press the **Menu** button to exit the menu without making changes.

#### ☐ Main Menu ® Display Settings ® Last Alarm

To display the time and date of the last alarm, near the upper right hand corner of the primary monitor, select **on**. The unit will display **NONE** if there is no previous record of an alarm.

OFF
ON

Use the **Jog** to select **on** or **off**.

Press the **Enter** button to confirm the selection and exit the menu.

--OR--

Press the **Menu** button to exit the menu without making changes.

#### ☐ Main Menu ® Display Settings ® Playback Time / Date

To display the time and date the recording was made (during playback) select **on**. The data is displayed near the upper right hand corner of the screen.

OFF
ON

Use the **Jog** to select **on** or **off**.

Press the **Enter** button to confirm the selection and exit the menu.

--OR--

Press the **Menu** button to exit the menu without making changes.

## 4.6 Main Menu ® Archive Setup

Use this menu to:

- Select data to be archived and begin archiving process.
- Restore data from archive device.
- Enable background archiving.
- Specify how the unit will handle overwrite issues when the archive medium becomes full.
- Erase the archived data.

Selective archive
Restore from archive
Background archive
Archive Overwrite Mode
Erase Archive Medium

#### ☐ Main Menu ® Archive Setup ® Selective Archive

The Selective Archive feature allows the user to archive recorded data from the hard disk onto a CD, DAT, AIT, RAID, or DVSe. See the Archiving Addendum for details about using archive devices.

The Archive Search Filters menu allows the user to search the hard disk for recorded events, such as an alarm condition, or a previous recording session, then select events to be archived for later viewing. For example, each time Record mode is activated, it is considered a separate recording session.

Use this menu to specify:

- The Start and Stop date of the search.
- The Start and Stop time of the search.
- Which cameras to search exclusively.
- To search for recorded alarms.

Archive Search Filters			
Start		Stop	
DATE: 12/25/00	[ ]	01/01/01	[ ]
(MM/DD/YY)		(MM/DD/YY)	
Start		Stop	
TIME: 11:11:21	[ ]	12:34:34	[ ]
CAMERA: [ ] [ ] [ ] [ ] [ ] [ ] [ ] [ ]			
ALARM: [ ]			
[ CANCEL ]		[ START SEARCH ]	

## Searching for All Recorded Events

Using the **Shuttle** to navigate, highlight [ **START SEARCH** ], then press the **Enter** button. The Archive Search Results window will appear. For information about selecting a recorded event, see **Selecting from the Archive Search Results**, in this section.

## Specifying Search Parameters

### Selecting a Start and Stop Date

1. Using the **Shuttle** to navigate, highlight the **DATE** parameter, then press the **Enter** button. The unit will enter Edit mode.
2. Use the **Jog** to change the start and stop date values. Use the **Shuttle** to navigate among the different parameters.
3. To activate the start or stop date parameter, use the **Jog** to place an [ **X** ] in the check box.
4. Press the **Enter** button at any time to exit Edit mode.

### Selecting a Start and Stop Time

1. Using the **Shuttle** to navigate, highlight the **TIME** parameter, then press the **Enter** button. The unit will enter Edit mode.
2. Use the **Jog** to change the start and stop time values. Use the **Shuttle** to navigate among the different parameters.
3. To activate the start or stop time parameter, use the **Jog** to place an [ **X** ] in the check box.
4. Press the **Enter** button at any time to exit Edit mode.

### Selecting Cameras to Search

1. Using the **Shuttle** to navigate, highlight the **CAMERA** parameter, then press the **Enter** button. The unit will enter Edit mode.
2. Use the **Shuttle** to navigate among the different cameras.
3. Use the **Jog** to select a camera (or cameras) by placing an [ **X** ] in the check box.
4. Press the **Enter** button at any time to exit Edit mode.

## Searching for Recorded Alarms

1. Using the **Shuttle** to navigate, highlight the **ALARM** parameter, then press the **Enter** button. The unit will enter Edit mode.
2. Use the **Jog** to activate the alarms search, by placing an **[x]** in the check box.
3. Press the **Enter** button at any time to exit Edit mode.

## Starting the Search

Using the **Shuttle** to navigate, highlight the **[START SEARCH]** parameter, then press the **Enter** button. The Archive Search Results menu will appear.


Archive Search Results				
	Start Date	Start Time	Size (MB)	
000	11/28/2000	17:52:14	26842	[ ]
001	11/29/2000	09:35:20	2062	[ ]
002	11/29/2000	10:00:04	278	[x]
003	11/29/2000	10:03:25	66	[x]
				Selected [ 383 ](MB)
				Available on Target Medium [ 652 ](MB)
"ENTER" to play			"SEARCH" to archive	

## Selecting from the Archive Search Results


1. Use the **Jog** to navigate, highlighting the recorded event you wish to select
2. Use the **Shuttle** to select a recorded event by placing an **[x]** in the check box.

## Starting the Archive Process

To begin archiving, press the **Search** button. The Archiving progress bar will appear. Press the **Enter** button to cancel archiving at any time.

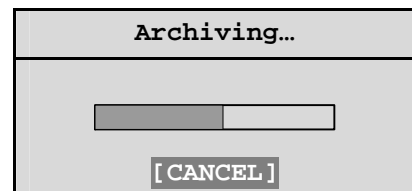

When the unit is finished archiving this message box will appear. Press the **Enter** button to acknowledge the message and complete the archiving process.

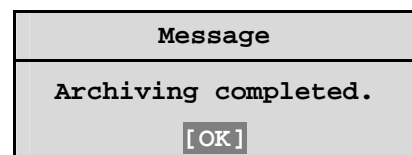

## ❑ Main Menu ® Archive Setup ® Restore From Archive

The DSR supports data restoration to the hard disk from an archive device. Data may be restored from a DAT, AIT, RAID, or DVSe. See the Archiving Addendum for details about using archive devices. The DSR does allow the user to search the archived data for recorded events, such as an alarm condition, or a previous recording session.

Use this to specify:

- The Start and Stop date of the search.
- The Start and Stop time of the search.
- Which cameras to search exclusively.
- To search for recorded alarms.

Restore Search Filters			
Start		Stop	
DATE: 12/25/00	[ ]	01/01/01	[ ]
(MM/DD/YY)		(MM/DD/YY)	
Start		Stop	
TIME: 11:11:21	[ ]	12:34:34	[ ]
CAMERA: [ ] [ ] [ ] [ ] [ ] [ ] [ ] [ ]			
ALARM: [ ]			
[ CANCEL ]		[ START SEARCH ]	

### Searching for All Recorded Events

Using the **Shuttle** to navigate, highlight [ **START SEARCH** ], then press the **Enter** button. The Restore Search Results window will appear.

### Specifying Search Parameters

#### Selecting a Start and Stop Date

1. Using the **Shuttle** to navigate, highlight the **DATE** parameter, then press the **Enter** button. The unit will enter Edit mode.
2. Use the **Jog** to change the start and stop date values. Use the **Shuttle** to navigate among the different parameters.
3. To activate the start or stop date parameter, use the **Jog** to place an [X] in the check box.
4. Press the **Enter** button at any time to exit Edit mode.

#### Selecting a Start and Stop Time

1. Using the **Shuttle** to navigate, highlight the **TIME** parameter, then press the **Enter** button. The unit will enter Edit mode.
2. Use the **Jog** to change the start and stop time values. Use the **Shuttle** to navigate among the different parameters.
3. To activate the start or stop time parameter, use the **Jog** to place an [X] in the check box.
4. Press the **Enter** button at any time to exit Edit mode.

#### Selecting Cameras to Search

1. Using the **Shuttle** to navigate, highlight the **CAMERA** parameter, then press the **Enter** button. The unit will enter Edit mode.

2. Use the **Shuttle** to navigate among the different cameras.
3. Use the **Jog** to select a camera (or cameras) by placing an [X] in the check box.
4. Press the **Enter** button at any time to exit Edit mode.

### Searching for Recorded Alarms

1. Using the **Shuttle** to navigate, highlight the **ALARM** parameter, then press the **Enter** button. The unit will enter Edit mode.
2. Use the **Jog** to activate the alarms search, by placing an [X] in the check box.
3. Press the **Enter** button at any time to exit Edit mode.

### Starting the Search

Using the **Shuttle** to navigate, highlight the [**START SEARCH**] parameter, then press the **Enter** button. The Restore Search Results menu will appear. Please note that restoring data indicated in this menu is not currently supported on the DSR unit.

Press the **Menu** button to exit the menu.

Restore Search Results				
	Start Date	Start Time	Size (MB)	
000	11/29/2000	10:00:04	279	[x]
001	11/29/2000	10:03:25	67	[x]
				Selected [ 383 ](MB)
				Available on Target Medium [ 652 ](MB)
"ENTER" to play			"SEARCH" to restore	

### ☐ Main Menu ® Archive Setup ® Background Archive

With the Background Archiving Feature turned ON, the unit archives recorded data automatically. Data is recorded to both the hard disk and the archiving device simultaneously.



The unit cannot Background Archive when the unit is recording at its highest record speed.

Use the Jog to select ON of OFF.

Press the **Enter** button to confirm the selection and exit the menu.

--OR--

Press the **Menu** button to exit the menu without making any changes.


## ❑ Main Menu ® Archive Setup ® Archive Overwrite Mode

For future use only.


## ❑ Main Menu ® Archive Setup ® Erase Archive Medium

To erase the archived data, press the **Enter** button. The Erasing Media progress bar will appear. Press the **Enter** button to cancel archiving at any time.

This feature is not available when archiving to a CD-R device.

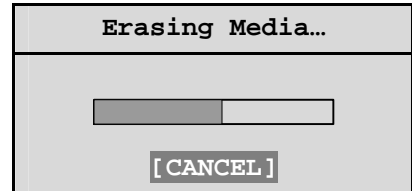


When the unit is finished erasing the data, this message box will appear. Press the **Enter** button to acknowledge the message and complete the deleting process.

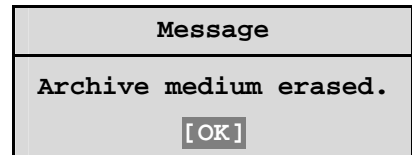

## 4.7 Main Menu ® Advanced Menu

To access the Advanced menu:

1. Select **ADVANCED MENU** from the Main menu, then press the **Enter** button. The Password Box will appear.
2. Enter the Advanced menu password. Use the **Jog** to select a character, then use the **Enter** button to complete the selection, and move to the next character.
3. Pressing the **Enter** button on the last character will complete the password selection and the unit will display the Advanced menu.

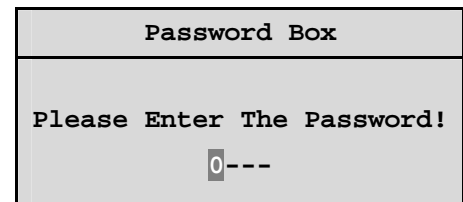



# 5 INSTALLER PROGRAMMING


For security reasons, a password is provided to limit access to the Advanced menu. For instructions about entering the Advanced menu, see section 4.7 Main Menu ® Advanced Menu, on page 4-12.

## 5.1 Advanced Menu ® Disk Overwrite Mode

Use this menu to specify how the unit will handle disk overwrite issues once the hard disk becomes full.

The unit handles disk overwrite issues in three ways:


- No Overwrite.
- Overwrite Once.
- Continuous Overwrite.

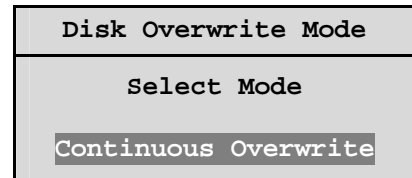

### ❑ Advanced Menu ® Disk Overwrite Mode ® No Overwrite

Functions of No Overwrite mode:


- Recording always starts at end of last recording.
- Recording stops when end of disk is reached (when disk is full).
- When the end of the disk is reached, the unit displays an on-screen message indicating that the disk is full, and the unit has stopped recording. User must acknowledge the on-screen message by pressing the **Enter** button.
- Unit will not record over previously recorded data. To continue recording, the data must be erased (or deleted) in the **Advanced** ® **Disk Maintenance** menu.

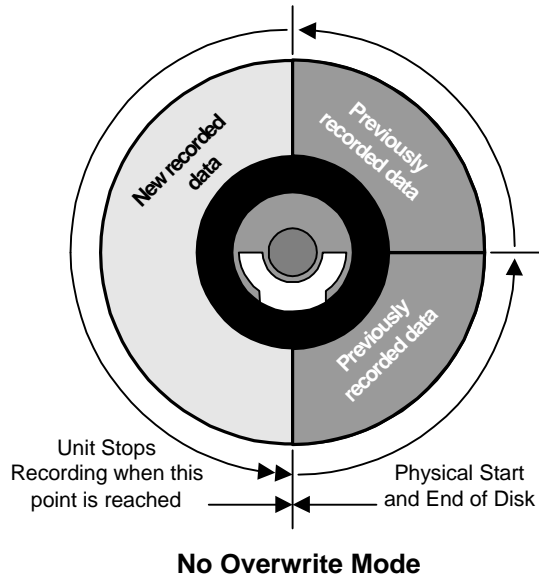

## ❑ Advanced Menu ® Disk Overwrite Mode ® Overwrite Once

Functions of Overwrite Once mode:


- Recording always starts at end of last recording.
- The unit overwrites all previously recorded data.
- Recording stops before the unit overwrites any of the new recorded data (data from the current record session).
- When the end of the disk is reached, the unit displays an on-screen message indicating that the disk is full, and the unit has stopped recording. User must acknowledge the on-screen message by pressing the **Enter** button.
- The unit will continue recording again when the user presses the **Record** button.

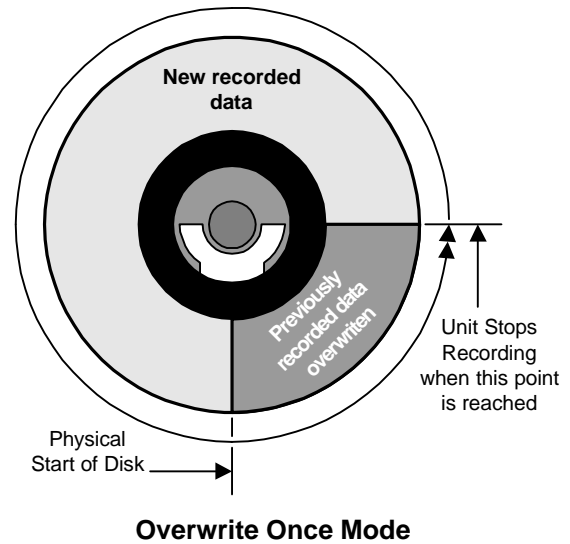

## ❑ Advanced Menu ® Disk Overwrite Mode ® Continuous Overwrite

Functions of Continuous Overwrite mode:

- Recording always starts at end of last recording.
- The unit overwrites all previously recorded data.
- The unit overwrites new recorded data (data from the current record session).
- Unit never stops recording.
- Record Capacity display will not count down.

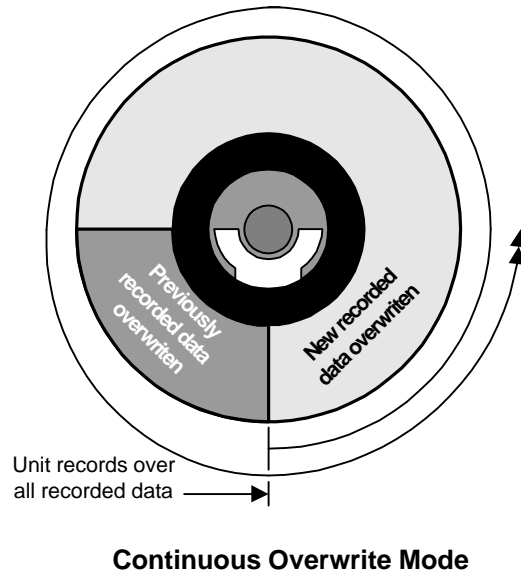

## 5.2 Advanced Menu ® Disk Maintenance

The user can have previously recorded information:

- Deleted (with the possibility of restoring it).
- Undeleted (restored if it has not yet been overwritten).
- Erased (removed with no possibility of restoring it).


Delete Disk
Undelete Disk
Erase Disk (Permanent)

### ❑ **Advanced Menu** ® **Disk Maintenance** ® **Delete Disk**

To begin deleting the disk, use the **Jog** to select **DELETE DISK**, then press the **Enter** button. The Deleting Disk menu will appear. The unit will begin deleting the oldest recorded information immediately.

To stop the delete process, select **[CANCEL]** by pressing the **Enter** button.


Data that was deleted before **[CANCEL]** was selected will remain deleted unless **UNDELETE DISK** is selected.

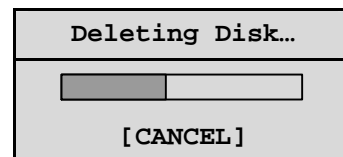

### ❑ **Advanced Menu** ® **Disk Maintenance** ® **Undelete Disk**

To restore information that was previously deleted, use the **Jog** to select **UNDELETE DISK**, then press the **Enter** button.

To stop the restore process, select **[CANCEL]** by pressing the **Enter** button.

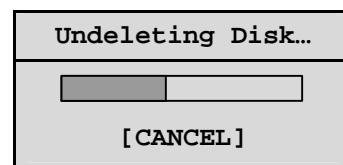


### ❑ **Advanced Menu** ® **Disk Maintenance** ® **Erase Disk (Permanent)**

**Caution: Erasing the disk removes recorded data without the possibility of restoring it.**

To begin erasing the disk, use the **Jog** to select **ERASE DISK (PERMANENT)**, then press the **Enter** button.

To stop the erasing process, select **[CANCEL]** by pressing the **Enter** button.


Data that was erased before **[CANCEL]** was selected will remain deleted permanently.

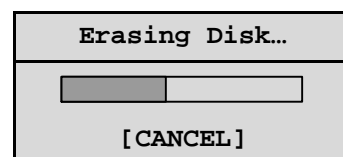

## 5.3 **Advanced Menu** ® **Audio Record Setting**

Use this menu to:

- Select Off and Disable the audio recording capability.
- Select G.711 and Enable the audio recording capability.



## 5.4 **Advanced Menu** ® **Auto Delete Mode**

Configuring the unit with the Auto Delete mode **ON** prevents the unit from displaying or archiving any data that is more than 30 days old. This feature may be required by law in some jurisdictions, please consult with the local authorities.

Use the **Jog** to select **ON** or **OFF**.

Press the **Enter** button to confirm the selection and exit the menu.

--OR--

Press the **Menu** button to exit the menu without making changes.



## 5.5 Advanced Menu <sup>®</sup> Communications

Use this menu to specify:

- The data transfer rate for the RS-232 serial port.
- The units Ethernet network connection settings.

Baud Rate
Ethernet

### □ Advanced Menu <sup>®</sup> Communications <sup>®</sup> Baud Rate

Use the **Jog** to select the Baud Rate.

Press the **Enter** button to confirm the selection and exit the menu.

--OR--

Press the **Menu** button to exit the menu without making changes.

1200 Baud
2400 Baud
4800 Baud
9600 Baud
19200 Baud
38400 Baud
57600 Baud

### □ Advanced Menu <sup>®</sup> Communications <sup>®</sup> Ethernet

An Ethernet session is an active network connection between a PC and the unit, with the user viewing live camera images or accessing data stored on the hard disk.

When Ethernet is first selected, this warning box will appear.

Select **OK** to continue.

Message	
Warning - Machine will reset if any values change!	
[OK]	

Use this menu to adjust the Ethernet settings for your network.

Use the **Shuttle** to navigate to the desired setting, then use the **Jog** to adjust the value.

Consult with your local MIS personnel before making Ethernet setting changes.

Ethernet Settings			
Ethernet	:	ENABLE	
IP Address	:	192.168. 1.201	
Subnet Mask	:	255.255.255. 0	
Gateway	:	0. 0. 0. 0	
		[CANCEL]	[OK]

Select **OK** to confirm the selection and exit the menu.

--OR--

Select **CANCEL** to exit the menu without making changes.

### How the unit handles an Ethernet session

At the start of an Ethernet session, the unit locks out its own front panel and disables all RS-232 and RS-485 communications. During the Ethernet session, the unit can only be accessed remotely, using the WaveReader software. When the Ethernet session ends, the unit re-enables the RS-232 and RS-485 communications and unlocks the front panel.

Playback stops when an Ethernet session is started. Playback will not be re-activated automatically when the Ethernet session ends.

## 5.6 Advanced Menu <sup>®</sup> Multiplexer Format

The DSR is compatible with several different brands of multiplexers. Use this menu to specify the Playback format of the multiplexer. If the unit not connected to a multiplexer, select **NONE**.

Use the **Jog** to select the Multiplexer format.

Press the **Enter** button to confirm the selection and exit the menu.

--OR--

Press the **Menu** button to exit the menu without making changes.

**Note:** The Navco multiplexer is only available on NTSC units.

None
Kalatel
Robot
DM
Philips
Pelco
Sanyo
Navco
ATV

## 5.7 Advanced Menu <sup>®</sup> Adjust Picture

Use this menu to specify the Brightness, Contrast, and Saturation of the video input. Adjustments made to the video input will alter the recorded image.

Brightness
Contrast
Saturation


### □ Advanced Menu <sup>®</sup> Adjust Picture <sup>®</sup> Adjust Brightness

Use this menu to increase or decrease the brightness of the image.

1. Use the **Shuttle** to navigate to the numbers.
2. Use the **Jog** to increase or decrease to brightness.
3. **To Save the changes and Exit the menu:** Use the **Shuttle** to select [OK], then press the **Enter** button.

--OR--

4. **To Exit the menu without making changes:** Use the **Shuttle** to select [CANCEL], then press the **Enter** button.

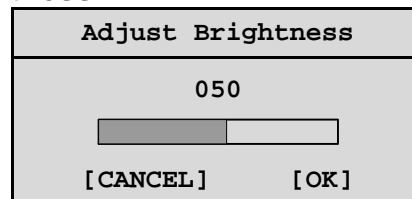


### □ Advanced Menu <sup>®</sup> Adjust Picture <sup>®</sup> Adjust Contrast

Use this menu to increase or decrease the contrast of the image.

1. Use the **Shuttle** to navigate to the numbers.
2. Use the **Jog** to increase or decrease to contrast.
3. **To Save the changes and Exit the menu:** Use the **Shuttle** to select [OK], then press the **Enter** button.

--OR--


4. **To Exit the menu without making changes:** Use the **Shuttle** to select [CANCEL], then press the **Enter** button.

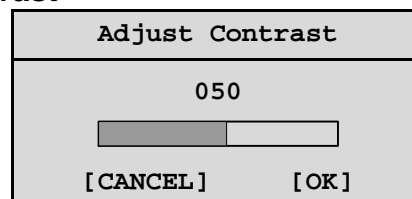

## ❑ Advanced Menu ® Adjust Picture ® Adjust Saturation

Use this menu to increase or decrease the saturation of the image. Saturation refers to the amount of color displayed in the image.

1. Use the **Shuttle** to navigate to the numbers.
2. Use the **Jog** to increase or decrease to saturation.
3. **To Save the changes and Exit the menu:** Use the **Shuttle** to select [OK], then press the **Enter** button.

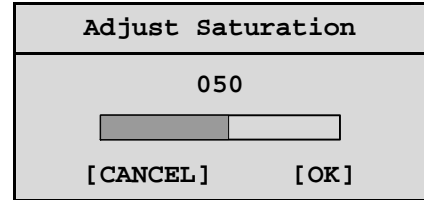

--OR--


4. **To Exit the menu without making changes:** Use the **Shuttle** to select [CANCEL], then press the **Enter** button.

## 5.8 Advanced Menu ® Front Panel Lock

Use this menu to Lock or Unlock the front panel.

Use the **Jog** to select UNLOCK KEYBOARD or LOCK KEYBOARD.

Press the **Enter** button to confirm the selection and exit the menu.

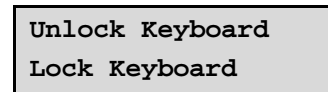

--OR--


Press the **Menu** button to exit the menu without making changes.

## 5.9 Advanced Menu ® Factory Settings

Use this menu to enter the Factory Password, and restore the unit to the factory defaults.

Use the **Jog** to select a character, then use the **Enter** button to complete the selection, and move to the next character.

Pressing the **Enter** button on the last character will complete the password selection and return the unit to the factory default configuration.

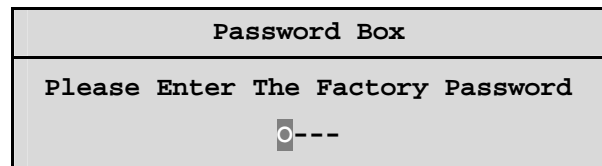


## 5.10 Advanced Menu ® Change Password

Use this menu to change the Advanced Menu Password.

Use the **Jog** to select a character, then use the **Enter** button to complete the selection, and move to the next character.

Pressing the **Enter** button on the last character will open the Confirmation Box.

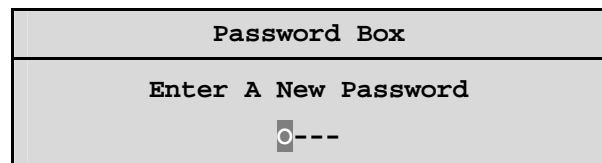

Re-enter the New password.

Pressing the **Enter** button on the last character will complete the password selection.

<b>Confirmation Box</b>
Please Re-Enter The Password
○---

If the password in the Confirmation Box **matches** the password from the Password box, this message will appear.

Press the **Enter** button to select [OK] and exit the menu.

<b>Message</b>
The New Password Has Been Accepted!
[OK]

If the password in the Confirmation Box **does not match** the password from the Password box, this message will appear.

Press the **Enter** button to select [OK] and exit the menu.

<b>Message</b>
The Password Was Not Changed!
[OK]





# 6

## RS-232 REMOTE PROTOCOL

The RS-232 protocol command structure uses “Start of Text” (S<sub>x</sub>) and “End of Text” (E<sub>x</sub>) characters to identify the beginning and end of command sequences.

The DSR supports the following command sequences:

### ASCII Command String

Command	ASCII String	Bytes in Hexadecimal
Play Forward	S <sub>x</sub> PLF E <sub>x</sub>	02 46 50 4C 03
Record	S <sub>x</sub> REC E <sub>x</sub>	02 52 45 43 03
Stop	S <sub>x</sub> STO E <sub>x</sub>	02 53 54 4F 03
Pause	S <sub>x</sub> PAU E <sub>x</sub>	02 50 41 55 03
Fast Forward	S <sub>x</sub> FWD E <sub>x</sub>	02 46 57 44 03
Rewind	S <sub>x</sub> REW E <sub>x</sub>	02 52 45 57 03
Frame Forward	S <sub>x</sub> FED E <sub>x</sub>	02 46 41 44 03
Frame Reverse	S <sub>x</sub> RAD E <sub>x</sub>	02 52 41 44 03
Play Reverse	S <sub>x</sub> RPL E <sub>x</sub>	02 52 50 4C 03
Increase Speed	S <sub>x</sub> ISP E <sub>x</sub>	02 49 53 50 03
Decrease Speed	S <sub>x</sub> DSP E <sub>x</sub>	02 44 53 50 03
Search	S <sub>x</sub> SEA E <sub>x</sub>	02 53 45 41 03
Up Arrow	S <sub>x</sub> ARU E <sub>x</sub>	02 41 52 55 03
Down Arrow	S <sub>x</sub> ARD E <sub>x</sub>	02 41 52 44 03
Left Arrow	S <sub>x</sub> ARL E <sub>x</sub>	02 41 52 4C 03
Right Arrow	S <sub>x</sub> ARR E <sub>x</sub>	02 41 52 52 03
Menu	S <sub>x</sub> MEN E <sub>x</sub>	02 4D 45 4E 03
Enter	S <sub>x</sub> ENT E <sub>x</sub>	02 45 4E 54 03
Set Clock	See instructions for setting clock in the following section.	

**Note:** All byte values shown in hexadecimal.

## Setting the Clock

The following table shows the command sequence for setting the clock:

<b>Command</b>	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>	<b>8</b>	<b>9</b>	<b>10</b>
<b>Value</b>	02	43	4C	4B	20	y1	y2	2D	m1	m2

<b>Command</b>	<b>11</b>	<b>12</b>	<b>13</b>	<b>14</b>	<b>15</b>	<b>16</b>	<b>17</b>	<b>18</b>	<b>19</b>	<b>20</b>
<b>Value</b>	2D	d1	d2	2C	h1	h2	3A	f1	f2	03

This gray cells in the Value row of this table indicate the correct positions for each byte of data in the command string.

Place the hexadecimal value of the desired ASCII character into the command string. Enter a two digit value for the Year, Month, Day, Hour, and Minute into the command string. Each digit is a separate byte. Use the last two digits of the year for the year value (For example, 2001 is entered as 01). Time is always designated in Military Time.

### Example

In this example, 14:39 on December 25, 2000 is used to demonstrate the Set Clock Command String.

	<b>Notation Used in Value Column</b>	<b>ASCII Character of desired Value</b>	<b>Hex Value entered into command string.</b>
<b>Year Character #1</b>	y1	0	30
<b>Year Character #2</b>	y2	0	30
<b>Month Character #1</b>	m1	1	31
<b>Month Character #2</b>	m2	2	32
<b>Day Character #1</b>	d1	2	32
<b>Day Character #2</b>	d2	5	35
<b>Hour Character #1</b>	h1	1	31
<b>Hour Character #2</b>	h2	4	34
<b>Minute Character #1</b>	f1	3	33
<b>Minute Character #2</b>	f2	9	39

The final Set Clock Command String for 14:39 in December 25, 2000 would appear as follows:

<b>Command</b>	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>	<b>8</b>	<b>9</b>	<b>10</b>
<b>Value</b>	02	43	4C	4B	20	30	30	2D	31	32

<b>Command</b>	<b>11</b>	<b>12</b>	<b>13</b>	<b>14</b>	<b>15</b>	<b>16</b>	<b>17</b>	<b>18</b>	<b>19</b>	<b>20</b>
<b>Value</b>	2D	32	35	2C	31	34	3A	33	39	03

## ASCII Status Request Messages

Command	ASCII String	Bytes in Hexadecimal
Model Name Request	S <sub>x</sub> MLN E <sub>x</sub>	02 4D 4C 4E 03
Software Version Number Request	S <sub>x</sub> SVN E <sub>x</sub>	02 73 77 4E 03
Record Mode Status Request	S <sub>x</sub> RMS E <sub>x</sub>	02 52 4D 73 03
Stop Mode Status Request	S <sub>x</sub> SMS E <sub>x</sub>	02 73 4D 73 03

## ASCII Status Response Messages

Command	ASCII String
Model Name Response	S <sub>x</sub> MLN DSR-2000e E <sub>x</sub>
Software Version Number Response	S <sub>x</sub> SVN 1.18 E <sub>x</sub>
Record Mode Status Response	S <sub>x</sub> RMS 0 E <sub>x</sub> (Not Recording)
	S <sub>x</sub> RMS 1 E <sub>x</sub> (Recording)
	S <sub>x</sub> RMS 2 E <sub>x</sub> (Not Recording and Disk Full)
	S <sub>x</sub> RMS 3 E <sub>x</sub> (Recording and Disk Full)
Stop Mode Status Response	S <sub>x</sub> SMS 0 E <sub>x</sub> (Not Playing)
	S <sub>x</sub> SMS 1 E <sub>x</sub> (Playing)
	S <sub>x</sub> SMS 2 E <sub>x</sub> (Not Playing and End of Disk)
	S <sub>x</sub> SMS 3 E <sub>x</sub> (Playing and End of Disk)



# 7 FACTORY DEFAULTS

---

Function	Setting
Time Format	24 Hour
Date Format	MM / DD / YY
Normal Record Speed	60 pictures per seconds (NTSC) or 50 pps (Pal)
Alarm Record Speed	60 pictures per seconds (NTSC) or 50 pps (Pal)
Record Quality	High
Disk Overwrite Mode	Continuous Overwrite
Archive Overwrite Mode	(Not currently implemented)
Auto Delete Mode	Off
Background Archive Mode	Off
Input	Composite
Front Panel Locked	Off
Brightness	50%
Contrast	50%
Saturation	50%
Display Current Time and Date	Off
Display Record Capacity	Off
Display Last Alarm	Off
Display Archive Status	Off
Display Playback Time and Date	Off
Baud Rate	9600
Hardwire Alarm	Enabled
Teletext Alarm	Enabled
Alarm Buzzer	Disabled
Multiplexer	None
Audio Record Setting	Off



# 8

## TECHNICAL SPECIFICATIONS

---

---

### General

Power Supply	120-240 Volt AC, Auto-Ranging adapter
Input Voltage	12 Volt DC
Power consumption	20 Watts Max.
Operating Temperature Range	Operating: 0 to 40 °C. Storage: -20 to +60 °C.
Relative Humidity Range (Non-Condensing)	Operating: 10% to 80%. Storage: 10% to 95%
Dimensions	Inches: 13 x 14 x 3.5 MM: 330 x 355 x 89
Weight	10 lbs. (4.5 kg)

### Connections

Ethernet Port	10 / 100Mb RJ-45
Power Connector	2.1mm Barrel Connector, Center Positive
Accessory I/O Port	DB-9 Male. See Section 1.9, Accessories Port
SCSI Port	50 Way High Density, SCSI connector
RS-232 Serial Port	DB-9 Male DTE Connection
SVHS In	4-pin mini-DIN connector (See caution below)
SVHS Out	4-pin mini-DIN connector
Composite Video In	BNC connector (See caution below)
Composite Video Out	BNC connector
Audio In	RCA Jack
Audio Out	RCA Jack

**Caution:** Do not connect both video inputs at the same time.

## Audio / Video

Video Signal Input	0.7 to 1.4 Volts peak-to-peak, with Automatic Gain Control
Video Signal Output	1 Volt peak-to-peak into 75-ohm
Input Termination	75-ohm
Colors	Y:U:V 4:2:2, 16.8 Million Colors
Gray Scale	256 Levels
Horizontal Resolution	720 Pixels
Vertical Resolution	484 Lines
Compression Standard	Wavelets
Audio In	RCA jack, 315mV, 40k Ohms. Unbalanced.
Audio Out	RCA jack, 315mV, 600 Ohms. Unbalanced.

## On-screen Video Indicators

Archive Status	Pause	Rewind
End of Data	Play	Start of Data
Fast Forward	Record Capacity	Time and Date
Last Alarm	Reverse Play	Video Loss

## Part Numbers

Accessories PCB	0900-0127
User Manual	0150-0163
Archiving Addendum	0150-0145
WaveReader Software CD	0151-0005
WaveReader Software Manual	0150-0143

All specifications are subject to change without notice. GE Interlogix believes all specifications are correct, but no liability is assumed for omissions or errors.



# 9 WARRANTY AND SERVICE

---

---

## 9.1 Factory Service



**Warning:** Do not open the top cover or attempt to service the unit, as this may expose you to dangerous voltages and other hazards. Programmer maintenance of this unit is limited to external cleaning and inspection. Refer all servicing to qualified personnel.

If the unit requires factory service, contact the dealer who supplied the unit to you for the correct procedures on returning the unit to the factory or the nearest factory service center.

If the dealer is not available, contact the manufacturer of the unit as detailed below and request a Return Material Authorization number (RMA). The unit's serial number must be provided before a RMA number can be issued. Units returned to the factory for service must have freight and insurance prepaid, and must show the RMA number clearly on all shipping documents. The failure symptoms must be clearly described by the operator and enclosed with the unit together with a copy of the original suppliers invoice. Failure to comply with these instructions will delay service of the unit, and may result in the unit not being accepted by the Repair Center.

### Factory Address

GE Interlogix  
Attention: Repair Center  
3197-C Airport Loop Drive  
Costa Mesa, CA. 92626  
United States of America  
Telephone: 800-343-3358 (7:00 AM to 4:30 PM, Pacific Time)  
In Oregon: 541-754-9133  
Fax: 541-754-7162 (24 hours a day)

For warranty information, see the following page.

## 9.2 Warranty and Return Information

GE Interlogix warrants all of its equipment for three years from the date of purchase. This warranty covers any defects in materials and workmanship. Equipment failures that are due to improper installation, modification, abuse, or acts of nature will not be covered by this warranty. The repair department will evaluate all equipment returned for repair to determine warranty coverage. The Tech Support Manager will resolve any questions that may arise during evaluation to make a final determination.

**Note:** The three-year warranty does not apply to the following products:  
MobileView® and the monitor CRT, which carry a 12-month warranty from the date of purchase.

The warranty specifically covers any defects in material and workmanship and does not cover equipment that has been abused, damaged, or modified.

**For all warranty repairs**, GE Interlogix will cover all costs, including parts, labor, and shipping. Repaired equipment will be returned via the same method of shipment in which it was received. If a customer requests a faster return shipment, the difference will be charged.

**For all non-warranty repairs**, the customer will be billed for parts, labor, and shipping. Labor will be billed in half-hour increments.

**Note:** Customers requesting an estimate prior to repair will be notified by phone. If they cannot be reached, they will be notified by fax. If we are unable to reach the contact person for repair authorization after one phone attempt and two fax attempts, the equipment will be returned without being repaired. We will hold equipment no longer than two weeks.

### Advance Replacement Policy

When an advance replacement is required, we will send the customer replacement equipment from our stock and receive the returned product in exchange. The received equipment will be evaluated and the repair department will determine whether it is a warranty replacement. If it is non-warranty, see our repair policy above for details. The following guidelines will be used for all advance replacements:

- Fewer than 45 days from purchase, GE Interlogix will replace the product with new equipment.
- From 45 days to 1 year from purchase, GE Interlogix will replace the product with refurbished equipment.
- From 1 year to 3 years from purchase, the product must be sent in for repair. Advance replacements will be sent for a fee of \$100.

If you have questions about this policy, please contact the GE Interlogix RMA Department at 800-469-1676.